 







# BLACK+ DECKER™

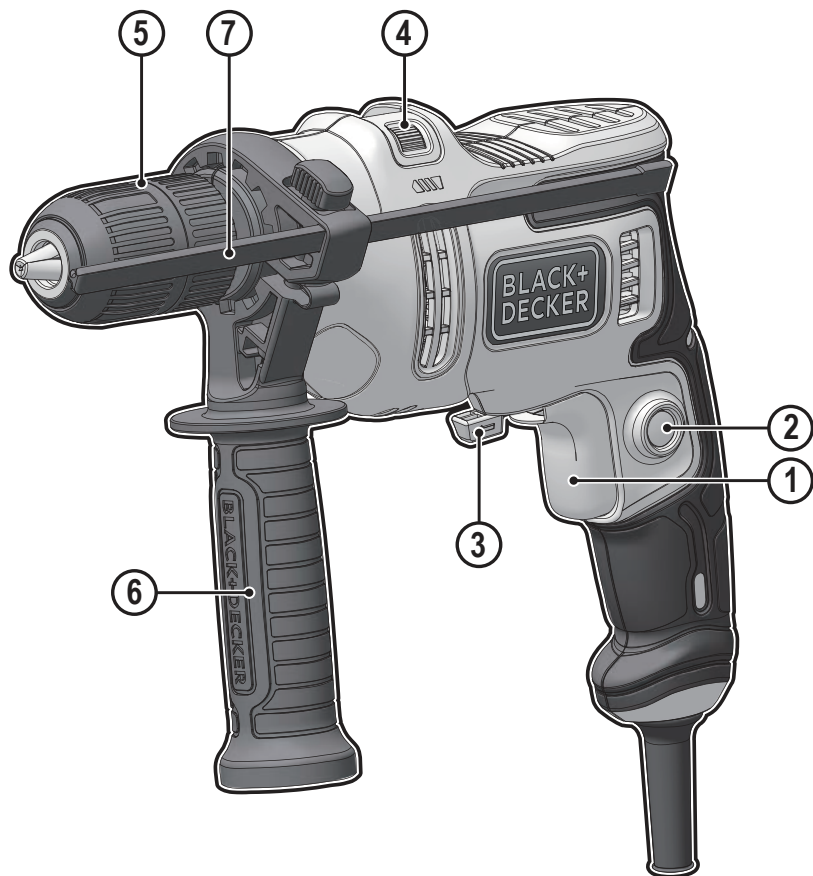


**BEH200**

**English**  
**简体中文**

      **3**  
**8**

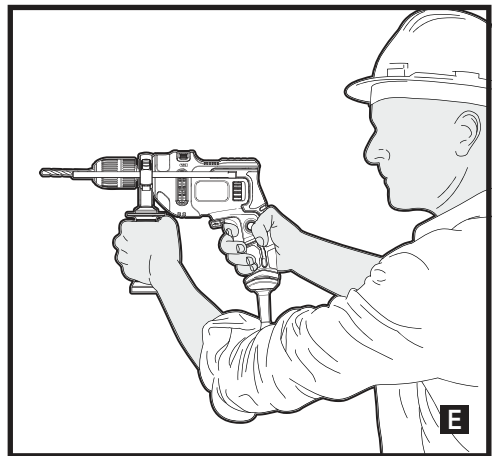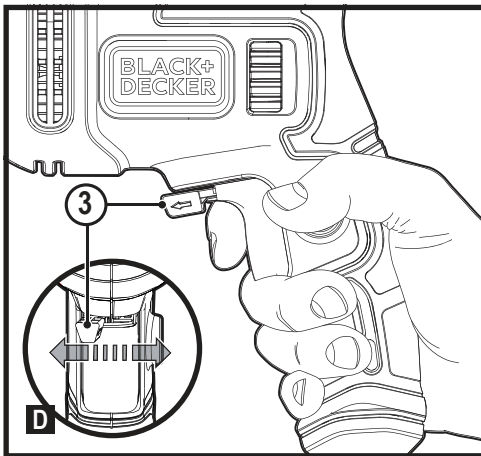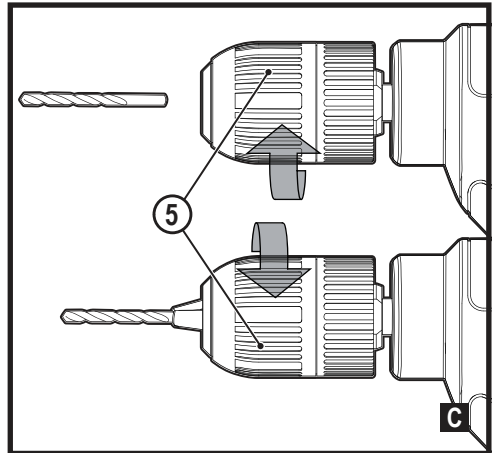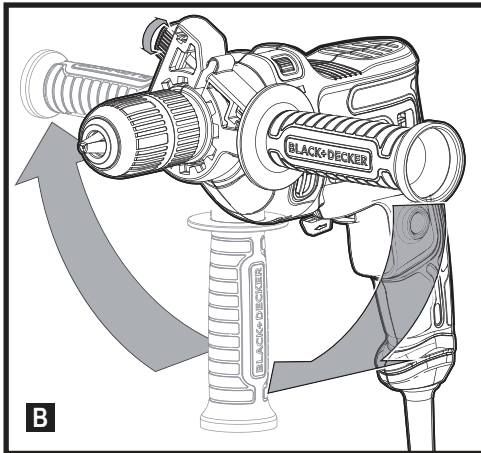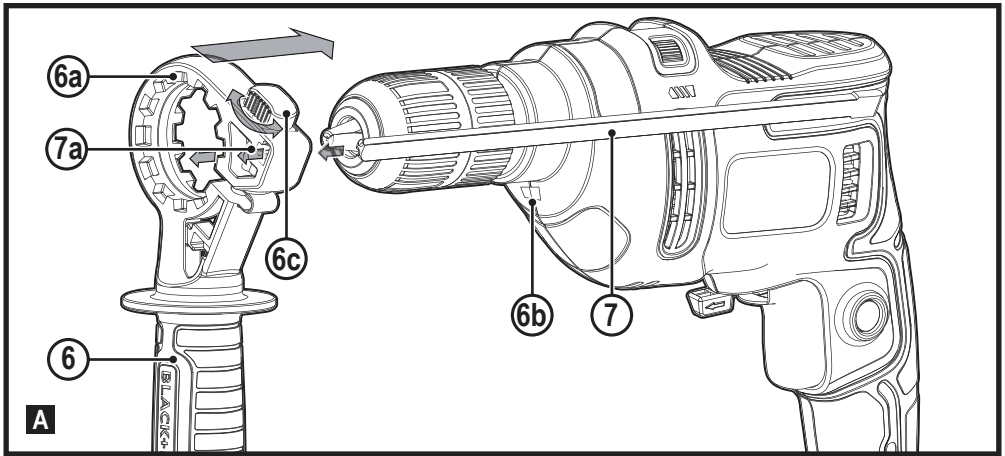

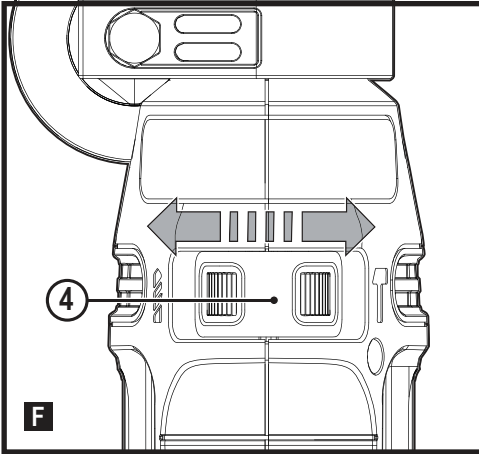

- Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
  - c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
  - d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
  - e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
  - f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

## Intended use

Your BLACK+DECKER BEH200 Impact drill has been designed for drilling in wood, metal, plastics, and masonry as well as for screwdriving purposes. This tool is intended for consumer use only.

## Safety instructions

### General power tool safety warnings



**Warning! Read all safety warnings, instructions, illustrations and specifications provided with this power tool.** Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury..

### Save all warnings and instructions for future reference.

The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

#### 1. Work area safety

- a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

#### 2. Electrical safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**

#### 3. Personal safety

- a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**

Use of dust collection can reduce dust-related hazards.

- h. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.
- 4. Power tool use and care**
- a. Do not force the power tool. Use the correct power tool for your application.**  
The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**  
Power tools are dangerous in the hands of untrained users.
- e. Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f. Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**  
Use of the power tool for operations different from those intended could result in a hazardous situation.
- h. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.**
- 5. Service**
- a. Have your power tool serviced by a qualified repair person using only identical replacement parts.**  
This will ensure that the safety of the power tool is maintained.

- ◆ **Wear ear protectors when impact drilling.** Exposure to noise can cause hearing loss.
- ◆ **Use auxiliary handles supplied with the tool.** Loss of control can cause personal injury.
- ◆ **Brace the tool properly before use.** This tool produces a high output torque and without properly bracing the tool during operation, loss of control may occur resulting in personal injury.
- ◆ **Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring or its own cord.** Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

### Safety instructions when using long drill bits

- ◆ **Never operate at higher speed than the maximum speed rating of the drill bit.** At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the workpiece, resulting in personal injury.
- ◆ **Always start drilling at low speed and with the bit tip in contact with the workpiece.** At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the workpiece, resulting in personal injury.
- ◆ **Apply pressure only in direct line with the bit and do not apply excessive pressure.** Bits can bend causing breakage or loss of control, resulting in personal injury.
- ◆ **Never use a chisel accessory in rotary mode.** The accessory will bind in the material and rotate the drill.
- ◆ **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body leaves it unstable and may lead to loss of control.
- ◆ Before drilling into walls, floors or ceilings, check for the location of wiring and pipes.
- ◆ Avoid touching the tip of a drill bit just after drilling, as it may be hot.
- ◆ The intended use is described in this instruction manual. The use of any accessory or attachment or performance of any operation with this tool other than those recommended in this instruction manual may present a risk of personal injury and/or damage to property.
- ◆ Use a face or dust mask whenever the operations may produce dust or flying particles.

### Safety of others

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### Additional power tool safety warnings



**Warning!** Additional safety warnings for rotary and chiselling hammers

- ◆ Children should be supervised to ensure that they do not play with the appliance.

### Residual risks.

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any rotating/moving parts.
- ◆ Injuries caused when changing any parts, blades or accessories.
- ◆ Injuries caused by prolonged use of a tool. When using any tool for prolonged periods ensure you take regular breaks.
- ◆ Impairment of hearing.
- ◆ Health hazards caused by breathing dust developed when using your tool (example:- working with wood, especially oak, beech and MDF.)

### Labels on tool

The following pictograms are shown on the tool along with the date code:



**Warning!** To reduce the risk of injury, the user must read the instruction manual.



Wear ear protectors with Impact drills. Exposure to noise can cause hearing loss

### Electrical safety



This tool is double insulated; therefore no earth wire is required. Always check that the power supply corresponds to the voltage on the rating plate.

- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised BLACK+DECKER Service Centre in order to avoid a hazard.

### Features

1. Variable speed switch
2. Lock on button
3. Forward/reverse switch
4. Drilling mode selector
5. Chuck
6. Side handle
7. Depth gauge (Not Supplied)

### Assembly

**Warning!** Before assembly, make sure that the tool is switched off and unplugged.

### Fitting the side handle and depth gauge (fig. A, B)

- ◆ Turn the knob (6c) counter clockwise until you can slide the side handle (6) onto the front of the tool as shown.
- ◆ Rotate the side handle into the desired position ensuring that the notches (6a) engage with the sprocket (6b).
- ◆ Insert the depth gauge (7) (Not Supplied) into the mounting hole (7a).
- ◆ Set the drilling depth as described below.
- ◆ Tighten the side handle by turning the knob (6c) clockwise.

**Note:** the side handle can be positioned as shown in figure B, depending on personal preference.

### Fitting a drill bit (fig. C)

- ◆ Open the chuck by turning the front part with one hand while holding the rear part with the other.
- ◆ Insert the bit shaft into the chuck and firmly tighten the chuck.

### Use

**Warning!** Let the tool work at its own pace. Do not overload.

**Warning!** Before drilling into walls, floors or ceilings, check for the location of wiring and pipes.

### Selecting the direction of rotation (fig. D)

For drilling and for tightening screws, use forward (clockwise) rotation. For loosening screws or removing a jammed drill bit, use reverse (counter clockwise) rotation.

- ◆ To select forward rotation, push the forward/reverse switch (3) to the left position.
- ◆ To select reverse rotation, push the forward/reverse button to the right.

**Warning!** Never change the direction of rotation while the motor is running.

### Setting the drilling depth (fig. E)

- ◆ Slacken the side handle (6) by turning the knob (6a) counter clockwise.
- ◆ Set the depth gauge (7) (Not Supplied) to the desired position. The maximum drilling depth is equal to the distance between the tip of the drill bit and the front end of the depth gauge.
- ◆ Tighten the side handle by turning the knob (6c) clockwise.

### Selecting the drilling mode (fig. F)

- ◆ For Impact drilling in masonry and concrete, set the drilling mode selector (4) to the **T** position.
- ◆ For drilling in steel, wood and plastics or for screw driving set the operating mode selector (4) to the **1** position.

## Switching on and off

- ◆ To switch the tool on, press the variable speed switch (1). The tool speed depends on how far you press the switch. As a general rule, use low speeds for large diameter drill bits and high speeds for smaller diameter drill bits.
- ◆ For continuous operation, press the lock-on button (2) and release the variable speed switch. The lock on button is available only at full speed in forward mode. In the reverse mode, the lock on button is not available.
- ◆ To switch the tool off, release the variable speed switch. To switch the tool off when in continuous operation, press the variable speed switch again and release it. Always hold the tool as shown in figure E.

## Accessories

The performance of your tool depends on the accessory used. BLACK+DECKER accessories are engineered to high quality standards and designed to enhance the performance of your tool. By using these accessories you will get the very best from your tool.

## Maintenance

Your BLACK+DECKER corded/cordless appliance/tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

**Warning!** Before performing any maintenance on corded/cordless power tools:

- ◆ Switch off and unplug the appliance/tool.
- ◆ Or switch off and remove the battery from the appliance/tool if the appliance/tool has a separate battery pack.
- ◆ Or run the battery down completely if it is integral and then switch off.
- ◆ Unplug the charger before cleaning it. Your charger does not require any maintenance apart from regular cleaning.
- ◆ Regularly clean the ventilation slots in your appliance/tool/charger using a soft brush or dry cloth.
- ◆ Regularly clean the motor housing using a damp cloth. Do not use any abrasive or solvent-based cleaner.
- ◆ Regularly open the chuck and tap it to remove any dust from the interior (when fitted).

## Protecting the environment

Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste. Products and batteries contain materials that can be



recovered or recycled reducing the demand for raw materials.



Please recycle electrical products and batteries

according to local provisions.

Further information is available at [www.2helpU.com](http://www.2helpU.com)

## Maintenance

Your BLACK+DECKER tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

Your charger does not require any maintenance apart from regular cleaning.

**Warning!** Before performing any maintenance on the tool, remove the battery from the tool. Unplug the charger before cleaning it.

- ◆ Regularly clean the ventilation slots in your tool and charger using a soft brush or dry cloth.
- ◆ Regularly clean the motor housing using a damp cloth. Do not use any abrasive or solvent-based cleaner.
- ◆ Regularly open the chuck and tap it to remove any dust from the interior.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

BLACK+DECKER provides a facility for the collection and recycling of BLACK+DECKER products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

You can check the location of your nearest authorised repair agent by contacting your local BLACK+DECKER office at the address indicated in this manual. Alternatively, a list of authorised BLACK+DECKER repair agents and full details of our after-sales service and contacts are available on the Internet at: [www.2helpU.com](http://www.2helpU.com)

## Protecting the environment



Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

Products and batteries contain materials that can be recovered or recycled reducing the demand for raw materials. Please recycle electrical products and batteries according to local provisions.



Separate collection of used products and packaging allows materials to be recycled and used again. Reuse of recycled materials helps prevent

environmental pollution and reduces the demand for raw materials.

Some local governments may require the local or municipal waste disposal centers or retailers of new products to provide households with electronic product recycling services.

**Service Information**

BLACK+DECKER offers a full network of company-owned and authorized service locations throughout Asia. All BLACK+DECKER Service Centers are staffed with trained personnel to provide customers with efficient and reliable product service.


Whether you need technical advice, repair, or genuine factory replacement parts, contact the BLACK+DECKER location nearest to you.

**NOTE**

- ◆ BLACK+DECKER's policy is one of continuous improvement to our products and, as such, we reserve the right to change product specifications without prior notice.
- ◆ Standard equipment and accessories may vary by country.
- ◆ Product specifications may differ by country.
- ◆ Complete product range may not be available in all countries. Contact your local BLACK+DECKER dealers for range availability.

**Technical data**

		BEH200
Input voltage	V <sub>AC</sub>	220
Power input	W	500
No load speed	min <sup>-1</sup>	0 ~ 2900
Max. drilling capacity		
Concrete	mm	13
Steel	mm	13
Wood	mm	20
Weight	kg	1.69 with side handle

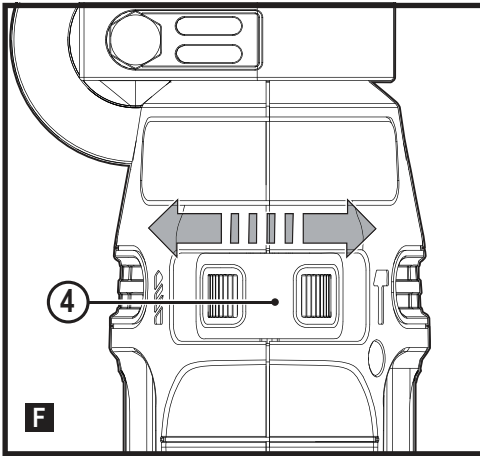 

- b. 避免人体接触接地表面，如管道、散热片和冰箱。如果你身体接触接地表面会增加电击风险。
- c. 不得将电动工具暴露在雨中或潮湿环境中。水进入电动工具将增加电击风险。
- d. 不得滥用软线。绝不能用软线搬运、拉动电动工具或拔出其插头。使软线远离热源、油、锐边或运动部件。受损或缠绕的软线会增加电击风险。
- e. 当在户外使用电动工具时，使用适合户外使用的延长线。适合户外使用的电线将降低电击风险。
- f. 如果无法避免在潮湿环境中操作电动工具，应使用带有剩余电流装置（RCD）保护的电源。RCD的使用可降低电击风险。

### 3. 人身安全

- a. 保持警觉，当操作电动工具时关注所从事的操作并保持清醒。当你感到疲倦，或在有药物、酒精或治疗反应时，不要操作电动工具。在操作电动工具时瞬间的疏忽会导致严重人身伤害。
- b. 使用个人防护装置。始终佩戴护目镜。防护装置，诸如适当条件下使用防尘面具、防滑安全鞋、安全帽、听力防护等装置能减少人身伤害。
- c. 防止意外起动。在连接电源和/或电池包、拿起或搬运工具前确保开关处于关断位置。手指放在开关上搬运工具或开关处于接通时通电会导致危险。
- d. 在电动工具接通之前，拿掉所有调节钥匙或扳手。遗留在电动工具旋转零件上的扳手或钥匙会导致人身伤害。
- e. 手不要过分伸展。时刻注意立足点和身体平衡。这样能在意外情况下能更好地控制住电动工具。
- f. 着装适当。不要穿宽松衣服或佩戴饰品。让你的头发和衣服远离运动部件。宽松衣服、佩饰或长发可能会卷入运动部件。
- g. 如果提供了与排屑、集尘设备连接用的装置，要确保其连接完好且使用得当。使用集尘装置可降低尘屑引起的危险。
- h. 不要因为频繁使用工具而产生的熟悉感而掉以轻心，忽视工具的安全准则。某个粗心的动作可能在瞬间导致严重的伤害。

### 4. 电动工具使用和注意事项

- a. 不要勉强使用电动工具，根据用途使用合适的电动工具。选用合适的按照额定值设计的电动工具会使你工作更有效、更安全。
- b. 如果开关不能接通或关断电源，则不能使用该电动工

## 设计用途

您的BLACK+DECKER BEH200冲击钻可在木材、塑料和砖石结构上钻孔，也可用来紧固螺丝。本工具仅供一般消费者使用。

## 安全说明

### 电动工具通用安全警告



**警告！** 阅读随电动工具提供的所有安全警告、说明、图示和规定。不遵照以下所列说明会导致电击、着火和/或严重伤害。

请保存所有警告和说明书以备查阅。

警告中的术语“电动工具”指市电驱动（有线）电动工具或电池驱动（无线）电动工具。

#### 1. 工作场地的安全

- a. 保持工作场地清洁和明亮。杂乱和黑暗的场地会引发事故。
- b. 不要在易爆环境，如有易燃液体、气体或粉尘的环境下操作电动工具。电动工具产生的火花会点燃粉尘或气体。
- c. 操作电动工具时，远离儿童和旁观者。注意力不集中会使你失去对工具的控制。

#### 2. 电气安全

- a. 电动工具插头必须与插座相配。绝不能以任何方式改装插头。需接地的电动工具不能使用任何转换插头。未经改装的插头和相配的插座将降低电击风险。



具。不能通过开关来控制的电动工具是危险的且必须进行修理。

- c. 在进行任何调节、更换附件或贮存电动工具之前，必须从电源上拔掉插头和/或卸下电池包（如可拆卸）。这种防护性的安全措施降低了电动工具意外起动的风险。
- d. 将闲置不用的电动工具贮存在儿童所及范围之外，并且不允许不熟悉电动工具和不了解这些说明的人操作电动工具。电动工具在未经培训的使用者手中是危险的。
- e. 维护电动工具及其附件。检查运动部件是否调整到位或卡住，检查零件破损情况和影响电动工具运行的其他状况。如有损坏，应在使用前修理好电动工具。许多事故是由维护不良的电动工具引发的。
- f. 保持切削刀具锋利和清洁。维护良好地有锋利切削刃的刀具不易卡住而且容易控制。
- g. 按照使用说明书，并考虑作业条件和要进行的作业来选择电动工具、附件和工具的刀头等。将电动工具用于那些与其用途不符的操作可能会导致危险情况。
- h. 保持手柄和握持表面干燥、清洁，不得沾有油脂。在意外的情况下，湿滑的手柄不能保证握持的安全和对工具的控制。

## 5. 维修

- a. 由专业维修人员使用相同的备件维修电动工具。这将保证所维修的电动工具的安全。

## 附加安全警告



**警告！** 针对电钻的安全警告。

- ◆ 带耳罩进行冲击作业。暴露于噪声环境会导致失聪。
- ◆ 使用辅助手柄。失控会导致人身伤害。
- ◆ 工具使用前应得到适当支撑。由于工具输出转矩大，运行时没有适当支撑会失控导致人身伤害。
- ◆ 当在钻削附件可能触及暗线或其自身导线的场合进行操作时，要通过绝缘握持面握持工具。钻削附件碰到带电导线会使工具外露的金属零件带电而使操作者受到电击。

## 使用长钻头的安全说明

- ◆ 切勿以高于钻头最大额定速度的速度运行。在较高的速度下，如果允许在不接触工件的情况下自由旋

转，钻头可能会弯曲，从而导致人身伤害。

- ◆ 始终以低速进行钻孔，钻头尖端与工件保持接触。在较高的速度下，如果允许在不接触工件的情况下自由旋转，钻头可能会弯曲，从而导致人身伤害。
- ◆ 仅在与钻头直接对齐时施加压力，并且不施加过大的压力。钻头可能弯曲致破损或失控，从而导致人身伤害。
- ◆ 切勿在转动模式下使用凿子附件。配件会与材料搅合在一起，并带动电钻。
- ◆ 请使用夹具或采取其它可行的方法，把工件可靠地固定在稳定的平台上。手持或用身体顶住工件都是不稳定的，会导致操作失控。
- ◆ 在墙上、地板或天花板上钻孔之前，请检查电线和管道位置。
- ◆ 不要在钻孔后立刻碰触可能还带热的钻头尖端。
- ◆ 本使用手册描述了工具的设计用途。使用非本使用手册所建议的任何其他附件或配件，或者使用本工具执行非手册建议的任何其他操作，都可能存在人身伤害和/或财产损失的危险。
- ◆ 请在可能产生灰尘或飞溅颗粒的情况下，佩戴口罩或防尘面罩。

## 他人安全

- ◆ 生理、感官或心理机能较差的人员（包括儿童），或者对该类产品缺少使用经验和知识的人员，除非由负责其安全的人员提供使用工具的监督或指示，否则不得使用此工具。
- ◆ 应看管好儿童，以确保他们不将此设备当做玩具来玩。

## 剩余风险

使用工具时，可能出现本安全警示之外的其他剩余风险。这些风险可能来自使用不当、使用时间过长等。

尽管遵守了相关的安全法规并采用了安全装备，某些剩余风险仍然是无法避免的。这些风险包括：

- ◆ 接触旋转/运动部件时所导致的伤害风险。
- ◆ 更换零件、锯片或配件时所导致的伤害风险。
- ◆ 长期使用工具所导致的伤害风险。长期使用任何工具时，均应定期休息。
- ◆ 听力损伤风险。
- ◆ 吸入工具使用过程中产生的粉尘导致的健康危害（例如，锯切木材，特别是橡木、山毛榉和中密度纤维板时）。

## 工具上的标签

工具上显示下列符号和日期码:



**警告!** 为降低伤害风险, 用户必须阅读使用手册。



使用冲击电钻时请佩戴听力防护装置。暴露在噪声中会引起听力损伤

## 电气安全



本工具为双重绝缘, 因此无需接地线。请务必检查电源电压是否与铭牌上的电压一致。

- ◆ 如果电源线损坏, 必须让制造商或授权的BLACK+DECKER服务中心更换以避免发生危险。

## 功能部件

1. 变速开关
2. 锁定按钮
3. 正/反转滑块
4. 钻孔模式选择器
5. 夹头
6. 侧边手柄
7. 深度量规 (未提供)

## 组装

**警告!** 在组装前, 请先确保工具已关闭并切断电源。

### 安装侧边手柄和深度量规 (图A, B)

- ◆ 逆时针转动把手(6c), 直到您能将侧边手柄(6)滑动到如图工具前端。
- ◆ 将侧边手柄转动到理想位置, 确保切口(6a)与链轮(6b)咬合。
- ◆ 将深度量规(7) (未提供) 插入安装孔(7a)内。
- ◆ 按照以下说明设定钻孔深度。
- ◆ 顺时针转动把手(6c), 拧紧把手。

**注:** 侧边手柄可以如图B所示安放, 这取决于个人偏好。

### 安装钻头 (图C)

- ◆ 一手转动前部, 一手握住后部, 打开夹头。
- ◆ 将钻头轴插入夹头, 然后紧固夹头。

## 使用

**警告!** 请让工具在自有速度下工作。请勿过载。

**警告!** 在墙上、地板或天花板上钻孔之前, 请检查电线和管道位置

### 选择转动方向 (图D)

如需钻孔和紧固螺丝, 使用正向 (顺时针) 转向。如需松开螺丝或移除卡住的钻头, 使用反向 (逆时针) 转向。

- ◆ 若选择正向转向, 请向左推动正向/反向开关(3)。
- ◆ 若选择反向转向, 请向右推动正向/反向开关。

**警告!** 不得在马达转动时改变转向。

### 设定钻孔深度 (图E)

- ◆ 逆时针转动把手(6a), 松开侧边手柄(6)。
- ◆ 将深度量规(7) (未提供) 设定到理想位置。最大钻孔深度等于钻头尖端与深度量规前端之间的距离。
- ◆ 顺时针转动把手(6c), 拧紧把手。

### 选择转动模式 (图F)

- ◆ 如要在砖石结构和混凝土中使用冲击电钻, 请将钻孔选择器(4)调节到 **T** 位置。
- ◆ 如要在钢铁、木材和塑料上钻孔或是安装螺丝, 请将模式选择器(4)调节到 **1** 位置。

## 开启和关闭

- ◆ 如需开启工具电源, 请按下变速开关(1)。工具转速取决于按压开关的程度。按照常规, 大直径钻头使用低转速, 小直径钻头使用高转速。
- ◆ 如果是连续操作, 请按下锁定按钮(2)并松开变速开关。仅在全速正向的模式下才可使用锁定按钮。不可在反向模式中使用锁定按钮。
- ◆ 如需关闭工具, 松开变速开关。如果要在持续操作中关闭工具, 请再次按下变速开关, 然后松开。务必按照图E所示一直握住工具。

## 附件

您工具的性能取决于您所用的附件。BLACK+DECKER附件均按照高品质标准制造, 并设计用于增强您工具的性能。使用这些附件将让您的工具发挥出最佳性能。

## 维护

您的BLACK+DECKER有线/无线设备/工具旨在让您在只需最少维护的情况下能够长期使用。若要持续令人满意的工作效果, 则需对工具进行恰当的保养和定期清洁。

**警告！**在对有线/无线电动工具进行维护工作前：

- ◆ 关闭设备/工具并切断电源。
- ◆ 如果设备/工具有独立的电池包，请关闭设备/工具并取下电池。
- ◆ 如果是内置的电池，则将电池内的电全部用完，然后关闭。
- ◆ 在清洁前，请先拔下充电器。除了定期清洁，您的充电器无需任何维护。
- ◆ 用软刷或干布定期清洁设备/工具/充电器中的通风槽。
- ◆ 定期使用湿布清洁电机外壳。请勿使用任何研磨性或溶剂型清洁剂。
- ◆ 定期打开夹头并轻敲，以去除内部灰尘。（如适用）

## 保护环境

分类收集。带有此符号标记的产品和电池不得与普通家庭垃圾一起处理。



产品和电池包含有可恢复或回收的材料，从而降低对原材料的需求。

请根据当地规定回收电气产品和电池。

更多信息，请访问[www.2helpU.com](http://www.2helpU.com)

## 维护

您的BLACK+DECKER有线工具旨在让您在只需最少维护的情况下能够长期使用。若要持续且令人满意的工作效果，则需对工具进行恰当的保养和定期清洁。

除了定期清洁外，本充电器无需其他保养。

**警告！**在对工具进行任何维护工作之前，请取下工具内的电池。清洁之前请拔下充电器的插头。

- ◆ 用软刷或干布定期清洁设备工具和充电器中的通风槽。
- ◆ 定期使用湿布清洁电机外壳。请勿使用任何研磨性或溶剂型清洁剂。
- ◆ 定期打开夹头并轻敲，以去除内部灰尘。

当地法规可能要求由市政废物回收站，或由向您出售新产品的经销商来提供从家庭中分类收集电子产品的服务。

BLACK+DECKER会提供收集设备，并将在BLACK+DECKER产品到达使用寿命限时进行回收。为了利用这项服务，请将您的产品交给任何授权维修代理机构。他们将代表我们进行回收。

您可以查看本手册中距离您最近的授权维修商地址。另外，您还可以访问以下网站，查看我们授权的维修代理机构，以及我们售后服务和联系人的全部详细信息：  
[www.2helpU.com](http://www.2helpU.com)

## 保护环境



分类收集。带有此符号标记的产品和电池不得与普通家庭垃圾一起处理。

产品和电池包含有可恢复或回收的材料，从而降低对原材料的需求。

请根据当地规定回收电气产品和电池。



分类收集用过的产品和包装可使材料循环再生利用。重新使用回收的材料有助于防止环境污染，并降低对原材料的需求。

一些当地政府可能会要求当地或市级的废弃物处理中心或新产品的零售商为居民提供电气产品回收服务。

## 服务信息

BLACK+DECKER提供覆盖整个亚洲的公司隶属和授权服务地点。所有的BLACK+DECKER服务中心都具备训练有素的人员，为客户提供高效和可靠的产品服务。不论您是需要技术建议、维修或原厂替换部件，请联系距离您最近的BLACK+DECKER服务地点。

## 备注

- ◆ BLACK+DECKER秉持精益求精，不断完善产品，因此我们保留随时更改产品规格的权利，恕不另行通知。
- ◆ 标准设备和附件可能会因国家（地区）而异。
- ◆ 不同国家（地区）的产品规格也可能会有所不同。
- ◆ 并非所有的国家（地区）都可提供完整的产品系列。如需有关各产品系列的供货情况，请联系您当地的BLACK+DECKER代理商。

## 技术数据

		BEH200
输入电压	伏特 <small>交流</small>	220
功率输入	瓦	500
额定空载转速	转/分	0 ~ 2900
最大钻进能力		
混凝土	毫米	13
钢材	毫米	13
木材	毫米	20
重量	千克	1.69 (带侧边手柄)

制造商: 百得 (苏州) 精密制造有限公司

地 址: 苏州工业园区苏虹中路200号出口加工区

产 地: 江苏苏州