
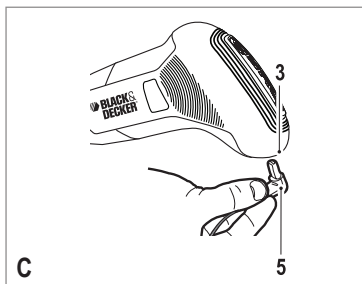
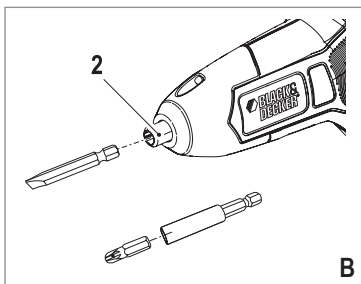


BDCS36G

English
简体中文

4
12

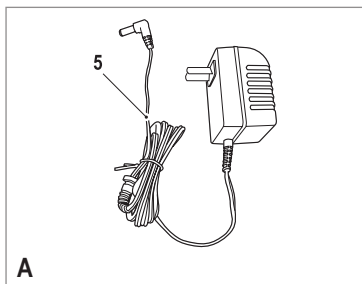

BDCS36G Screwdriver

Technical data

		BDCS36G
Voltage	V_{DC}	3.6
No-load speed	Min^{-1}	0-180
Max. torque (PTI Rating)	Nm	3
Battery type		Li-Ion
Battery capacity	Ah	1.3
Weight	kg	0.3

Charger		
Input Voltage	V_{AC}	220
Output Voltage	V_{DC}	9
Current	mA	100
Approx. charge time	h	12-15

Intended use

Your Black & Decker screwdriver has been designed for screwdriving applications. This tool is intended for consumer use only.

Safety instructions

General power tool safety warnings



Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

1. Work area safety

- Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2. Electrical safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**

Unmodified plugs and matching outlets will reduce risk of electric shock.

- b. **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3. Personal safety

- a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

- f. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
4. **Power tool use and care**
- a. **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e. **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
5. **Battery tool use and care**
- a. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b. **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

- c. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- d. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
6. Service
- a. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- ◆ Hold power tool by insulated gripping surfaces when performing an operation where the fastener may contact hidden wiring. Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
 - ◆ Use clamps or another practical way to secure and support the workpiece to a stable platform. Holding the work by hand or against your body leaves it unstable and may lead to loss of control.
 - ◆ This tool is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Additional power tool safety warnings



Warning! Additional safety warnings for screwdrivers and impact wrenches

- ◆ Use auxiliary handles if supplied with the tool. Loss of control can cause personal injury.

Safety of others

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Children should be supervised to ensure that they do not play with the appliance.

Residual risks.

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any rotating/moving parts.
- ◆ Injuries caused when changing any parts, blades or accessories.
- ◆ Injuries caused by prolonged use of a tool. When using any tool for prolonged periods ensure you take regular breaks.
- ◆ Impairment of hearing.
- ◆ Health hazards caused by breathing dust developed when using your tool (example:- working with wood, especially oak, beech and MDF.)

Labels on tool

The following symbols are shown on the tool:



Warning! To reduce the risk of injury, the user must read the instruction manual.

Additional safety instructions for batteries and chargers

Batteries

- ◆ Never attempt to open for any reason.
- ◆ Do not expose the battery to water.
- ◆ Do not store in locations where the temperature may exceed 40 °C.
- ◆ Charge only at ambient temperatures between 10 °C and 40 °C.
- ◆ Charge only using the charger provided with the tool.
- ◆ When disposing of batteries, follow the instructions given in the section "Protecting the environment".

Do not attempt to charge damaged batteries.



Chargers

- ◆ Use your Black & Decker charger only to charge the battery in the tool with which it was supplied. Other batteries could burst, causing personal injury and damage.
- ◆ Never attempt to charge non-rechargeable batteries.
- ◆ Have defective cords replaced immediately.
- ◆ Do not expose the charger to water.
- ◆ Do not open the charger.
- ◆ Do not probe the charger.



The charger is intended for indoor use only.



Read the instruction manual before use.

Electrical safety



Your charger is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate. Never attempt to replace the charger unit with a regular mains plug.

- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Black & Decker Service Centre in order to avoid a hazard.

Features

This tool includes some or all of the following features.

1. Motion control activator
2. Bit holder
3. Charger connector
4. LED work light

Fig. A

5. Charger

Assembly

Warning! Before assembly, remove the battery from the tool.

Fitting and removing a screwdriver bit or socket (fig. B)

Warning! Make certain the tool is locked to prevent switch actuation before installing or removing accessories.

- ◆ To fit a screwdriver bit push it into the bit holder (2) until it locates.
- ◆ To remove a screwdriver bit, pull it straight from the bit holder.

Note! To remove the bit/socket repeat the above steps.

Use

Warning! Let the tool work at its own pace. Do not overload.

Charging the battery (fig. C)

The battery needs to be charged before first use and whenever it fails to produce sufficient power on jobs that were easily done before. The battery may become warm while charging; this is normal and does not indicate a problem.

- ◆ To charge the battery, insert the charger plug (5) into the charger connector (3).
- ◆ Plug in the charger.
- ◆ Leave the tool connected to the charger for 16 hours.

The charger may hum and become warm while charging; this is normal and does not indicate a problem.

Warning! Do not charge the battery at ambient temperatures below 10 °C or above 40 °C. Recommended charging temperature: approx. 24 °C.

Low battery indicator

When the battery charge becomes low the LED work light will begin to flash rapidly.

- ◆ The LED Flash will last 5 seconds during Low voltage - - - - at this pattern..

Warning! Do not continue using the product with its batteries in a depleted condition. Recharge discharged batteries promptly..

High temperature indicator

When the circuit operating temperature becomes too high the LED work light will begin to flash in a long and short pattern.

- ◆ The LED Flash will last 5 seconds during circuit high temperature - . - . - . at this pattern. Allow the unit to cool down to an optimal operating temperature of approximately 24°C.

Setting the initial starting point (fig. D)

- ◆ Grasp the screwdriver as shown in figure D.
- ◆ Press and hold in the motion control activator (1) on the back of the tool with the palm of your hand.

- ◆ When the LED work light (4) illuminates the tool is ready for use.
- ◆ To reset initial starting point first release the motion control activator (1). Move tool to new position, then press and hold in the motion control activator (1) on the back of the tool with the palm of your hand..

Gyro control callibration

This tool automatically re-calibrates itself periodically to ensure correct operation of the motion-based gyro controls. If the controls do not appear to be working correctly the tool can be manually calibrated.

- ◆ Press the motion control activator (1).
- ◆ Release the motion control activator (1).
- ◆ Place the tool on a level surface.

The LED work light (4) will flash twice within 5 seconds to indicate that the tool has been re-calibrated.

Operating in the forward direction (fig. E)

- ◆ Set the initial starting point.
- ◆ Rotate the tool clockwise and the screwdriver will activate in the forward direction.

Note: The speed of the tool is determined by the amount of rotation. .

Small rotation = slower speed.

Large rotation = Higher speed.

Operating in the reverse direction (fig. F)

- ◆ Set the initial starting point.

- ◆ Rotate the tool anti-clockwise and the screwdriver will activate in the reverse direction.

Note: The speed of the tool is determined by the amount of rotation. .

Small rotation = slower speed.

Large rotation = Higher speed.

LED work light

The LED work light (4) is activated automatically when the motion control activator (1) is depressed.

Automatic shut off

To maintain battery life in case of accidental activation, the tool will automatically turn off after 45 seconds of continuous operation. The LED work light (4) will blink rapidly for 5 seconds before the tool shuts down.

Hints for optimum use

Screwdriving

- ◆ Always use the correct type and size of screwdriver bit.
- ◆ If screws are difficult to tighten, try applying a small amount of washing liquid or soap as a lubricant.
- ◆ Always hold the tool and screwdriver bit in a straight line with the screw.

Maintenance

Your Black & Decker tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

Your charger does not require any maintenance apart from regular cleaning.

Warning! Before performing any maintenance on the tool, remove the battery from the tool. Unplug the charger before cleaning it.

- ◆ Regularly clean the ventilation slots in your tool and charger using a soft brush or dry cloth.
- ◆ Regularly clean the motor housing using a damp cloth. Do not use any abrasive or solvent-based cleaner.
- ◆ Regularly open the chuck and tap it to remove any dust from the interior.

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again.

Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com

Batteries



Run the battery down completely, then remove it from the tool.

- ◆ NiCd, NiMH and Li-Ion batteries are recyclable. Take them to any authorised repair agent or a local recycling station.

Service Information

Black & Decker offers a full network of company-owned and authorized service locations throughout Asia. All Black & Decker Service Centers are staffed with trained personnel to provide customers with efficient and reliable product service.

Whether you need technical advice, repair, or genuine factory replacement parts, contact the Black & Decker location nearest to you.

NOTE

- ◆ Black & Decker's policy is one of continuous improvement to our products and, as such, we reserve the right to change product specifications without prior notice.
- ◆ Standard equipment and accessories may vary by country.
- ◆ Product specifications may differ by country.
- ◆ Complete product range may not be available in all countries. Contact your local Black & Decker dealers for range availability.

BDCS36G

螺丝起子

技术数据

BDCS36G		
电压	V_{DC}	3.6
空载转速	Min^{-1}	0-180
最大扭矩 (PTI 标称值)	Nm	3
电池类型		锂离子
电池容量	Ah	1.3
重量	kg	0.3

充电器		
输入电压	V_{AC}	220
输出电压	V_{DC}	9
电流	mA	100
大约充电时间	h	12-15

设计用途

您的 Black & Decker 螺丝起子设计用于螺丝安装。本工具仅供专业人士使用。

安全说明

电动工具一般安全警告。



警告！ 请仔细阅读所有安全警告和指示说明。如不遵守以下任何警告和指示说明，可能会导致触电、火灾和/或严重伤害。

请保存好所有警告和指示说明，以备将来查阅。以下所有警告中的术语“电动工具”一词是指电源驱动（有线）电动工具，或者电池驱动（无线）电动工具。

1. 工作场地安全

- 保持工作区域清洁、通亮。杂乱或阴暗的地方容易引发事故。
- 不要在易爆环境中操作电动工具，如有易燃液体、气体或粉尘的环境。电动工具产生的火花可能会点燃粉尘或气体。
- 操作电动工具时请让儿童和旁观者离开。干扰可能会导致您失去控制。

2. 电气安全

- 电动工具的插头必须与插座相配。切勿以任何方式改装插头。需接地的电动工具不能使用任何转换插头。未经改装的插头与同规格的插座将降低触电风险。
- 避免人体接触接地表面，如管道、散热片、炉灶和冰箱等。如果您的身体接地，触电风险会增加。

- c. 不得将电动工具暴露在雨中或潮湿环境中。电动工具进水会增加触电风险。
 - d. 不得滥用电线。切勿使用电线搬运、拉动电动工具或拔出其插头。保持电线远离热源、油、锐边或运动部件。受损或缠绕的电线会增加触电的危险。
 - e. 在户外操作电动工具时，使用适合户外使用的延长电线。适合户外使用的电线会减少触电危险。
 - f. 如果必须在潮湿场合操作电动工具，请使用漏电保护器 (RCD)。使用漏电保护器可减少触电危险。
- ### 3. 人身安全
- a. 保持警觉。操作电动工具时，关注所从事的操作并保持清醒。切勿在疲倦，或受到药物、酒精或治疗的影响下使用电动工具。操作电动工具时注意力不集中可能会导致严重的人身伤害。
 - b. 使用个人防护装备。始终佩戴护目装备。防护装备，例如适当条件下使用的防尘口罩、防滑安全鞋、安全帽或听力保护设备等将减少人身伤害。
 - c. 避免意外启动。在连接电源和/或电池组之前，以及拿起或搬动工具之前，请确保开关处于关闭位置。携带电动工具时把手指放在开关上，或开关处于接通状态时插入插头均可引发危险。
 - d. 在电动工具接通电源之前，取下所有调节钥匙或扳手。连接在电动工具旋转部件上的扳手或调节钥匙可能导致人身伤害。
 - e. 手不要伸得太长。时刻注意脚下和身体平衡。这样在意外情况下才能更好地控制电动工具。
 - f. 着装适当。不要穿宽松的衣服或佩戴首饰。让您的头发、衣服和手套远离运动部件。宽松的衣服、首饰或长发可能会卷入运动部件。
 - g. 如果提供了与排屑装置、除尘设备连接用的装置，请确保它们连接完好且使用得当。使用设备集尘可减少粉尘引起的危险。
- ### 4. 电动工具的使用和注意事项
- a. 不要过度使用电动工具。根据用途选用适当的电动工具。适当的电动工具在设计额定功率下能更安全地完成工作。
 - b. 电动工具开关不能接通或关断电源时，不要使用工具。任何不能用开关控制的电动工具都很危险，必须进行修理。
 - c. 在进行任何调整、更换配件或存放电动工具之前，必须从电源上拔掉插头及/或从电动工具上卸下电池组。这种预防性安全措施能减少意外启动电动工具的危险。
 - d. 将闲置的电动工具存放在儿童所及范围之外，并且不要让不熟悉电动工具或对这些指示不了解的人操作

电动工具。让未经训练的用户操作电动工具是很危险的。

- e. 维护电动工具。检查运动部件是否有任何安装偏差或卡住、部件破损情况以及是否存在影响电动工具运行的任何其他情况。如有损坏，必须在使用前修理电动工具。许多事故就是由于电动工具维护不良所导致。
- f. 保持刀具锋利和清洁。保养良好的有锋利切削刃的刀具不易卡住，而且更容易控制。
- g. 按照指示以及工作条件和所要进行的工作使用电动工具、配件和工具刀头等。将电动工具用于非预期操作用途可能会导致危险情况。

5. 电池工具的使用及注意事项

- a. 只能使用制造商指定的充电器为电池充电。使用适用于其它类型电池组的充电器充电可能会引发火灾。
- b. 电动工具只能配备明确指定的电池组。使用其它类型的电池组可能会造成人身伤害和引发火灾。
- c. 电池组放置不用时，要远离回形针、硬币、钥匙、钉子、螺丝以及其它可连通电池两极的金属物品。将电池两极短路会造成灼伤或引发火灾。
- d. 滥用电池的情况下，液体会从电池中喷出；要避免与液体接触。如果不小心接触到电池液体，请立即用清水冲洗。如果液体喷溅到眼睛

上，冲洗之后请就医。从电池喷出的液体可能会刺激皮肤或造成灼伤。

6. 维修

- a. 本电动工具必须由合格的维修人员采用相同的备件进行维修。这将确保电动工具的安全性能。

电动工具附加安全警告



警告！ 螺丝起子和冲击扳手的附加安全警告

- ◆ 使用工具随附的辅助手柄。工具失控会导致人身伤害。
- ◆ 在紧固件有可能接触隐藏的电线的场所进行操作时，请握住绝缘手柄表面。紧固件如果接触到“带电”导线，电动工具金属部件表面就会“带电”并使操作人员触电。
- ◆ 使用夹具或其它可行的方法，将工件固定并支撑到稳定的平台上。手持或用身体顶住工件都是不稳定的，会导致操作失控。
- ◆ 本工具不适合体力、感官或智力不足以及缺乏经验、知识的人员（包括儿童），除非负责他们安全的人员已经为他们提供关于使用此设备的监督或指示。必须监督儿童，确保他们没有耍玩设备。

他人安全

- ◆ 本设备不适合体力、感官或智力不足以及缺乏经验、知识的人员（包括儿童），除非负责他们安全的人员已经为他们提供关于使用此设备的监督或指示。
- ◆ 必须监督儿童，确保他们没有耍玩设备。

其他风险。

使用设备时，可能出现本安全警示之外的其他风险。这些风险可能来自使用不当，使用时间过长等。尽管遵守了相关的安全法规并采用了安全装备，某些风险仍然是无法避免的。这些风险包括：

- ◆ 接触旋转/移动部件时的伤害风险。
- ◆ 更换部件、锯片或配件时的伤害风险。
- ◆ 长期使用工具的伤害风险。长期使用任何工具时，均应定期休息。
- ◆ 听力损伤。
- ◆ 吸入工具使用过程中产生的粉尘导致的健康危害（例如，锯切木材，特别是橡木、山毛榉和中密度纤维板时）。

工具上的标签

工具有下列符号：



警告！ 为降低伤害风险，用户必须阅读使用手册。



充电器仅供室内使用。



使用前请阅读使用手册。

电池和充电器的附加安全说明

电池

- ◆ 不论基于任何理由，都不要尝试打开电池。
- ◆ 不要将电池暴露在水中。
- ◆ 不要将电池存放在温度可能超过 40°C 的地方。
- ◆ 只在环境温度介于 10°C 和 40°C 之间的情况下充电。
- ◆ 只能使用本工具随附的充电器为电池充电。
- ◆ 处理电池时，请遵循“保护环境”部分所提供的说明进行。



不要尝试对损坏的电池充电。

充电器

- ◆ 只能使用随附的 Black & Decker 充电器为工具内的电池充电。其他非原厂电池可能会爆裂，导致人身伤害和损害。
- ◆ 切勿尝试为不可再充电的电池充电。
- ◆ 应立即更换有缺陷的电线。
- ◆ 不要将充电器暴露在水中。
- ◆ 不要打开充电器。
- ◆ 不要刺破充电器。

电气安全



本充电器为双重绝缘，因此无需接地线。请务必检查电源电压是否与铭牌一致。切勿尝试使用一般的电源插头替换充电器。

- ◆ 如果电源线损坏，必须让制造商或授权的 Black & Decker 服务中心更换以避免发生危险。

部件名称

本工具包含如下部分或全部部件。

1. 运动控制启动器
2. 钻头夹持器
3. 充电器连接器
4. LED 工作灯

图 A

5. 充电器

组装

警告! 组装之前，请取出工具内的电池。

安装及拆卸螺丝起子头或插座 (图 B)

警告! 安装或拆卸零件前，请确保工具已锁定以避免开关启动。

- ◆ 要安装螺丝起子头，将它推入钻头夹持器 (2) 直至锁定到位。

- ◆ 要取出螺丝起子头，将它从钻头夹持器拉出。

注! 要取出螺丝起子头/插座，请重复上述步骤。

使用

警告! 请让工具在自有速度下工作。切勿过载。

为电池充电 (图 C)

电池在首次使用之前，以及无法像从前一样对工作轻松提供足够的电量时，都需要充电。电池在充电时可能会变热；这是正常现象，而且并不表示出现问题。

- ◆ 要为电池充电，将充电器插头 (5) 插入充电器连接器 (3)。
- ◆ 插入充电器。
- ◆ 让工具与充电器保持连接 16 小时。电池在充电时可能会发出声音和变热；这是正常现象，而且并不表示出现问题。

警告! 请不要在环境温度低于 10°C 或高于 40°C 的情况下为电池充电。建议的充电温度：约 24°C。

低电量指示灯

当电池电量低于可用限制时，LED 工作灯会不断闪烁。

- ◆ 低电量时，LED 将闪烁 5 秒，闪烁模式为 - - - - -。

警告! 电池电量耗尽的情况下，请不要再继续使用工具。请立即为电池充电。

高温指示灯

当电路工作温度过高，LED 工作灯将以长短模式开始闪烁。

- ◆ 电路高温时，LED 将闪烁 5 秒，闪烁模式为 - . - . - . - .。让工具冷却至大约 24°C 的最佳工作温度。

设置初始起点 (图 D)

- ◆ 抓住螺丝起子，如图 D 所示。
- ◆ 用手掌按住工具背面的运动控制启动器 (1)。
- ◆ LED 工作灯 (4) 亮起时，可使用工具。
- ◆ 要重设初始起点，请先释放运动控制启动器 (1)。将工具移至新位置，然后用手掌按住工具背面的运动控制启动器 (1)。

陀螺仪控制校准

此工具会自动定期重新校准，以确保基于运动的陀螺仪控制的正确操作。如果工具的控制没有正确工作，可以手动校准工具。

- ◆ 按下运动控制启动器 (1)。
- ◆ 释放运动控制启动器 (1)。
- ◆ 将工具放置在水平的工作面上。

LED 工作灯 (4) 会在 5 秒内闪烁两次，表示工具已完成重新校准。

正向操作 (图 E)

- ◆ 设置初始起点。
- ◆ 顺时针旋转工具，螺丝起子将正向启动。

注：工具的速度是以旋转量为基础。
小旋转 = 慢速。
大旋转 = 高速。

反向操作 (图 F)

- ◆ 设置初始起点。
- ◆ 逆时针旋转工具，螺丝起子将反向启动。

注：工具的速度是以旋转量为基础。
小旋转 = 慢速。
大旋转 = 高速。

LED 工作灯

LED 工作灯 (4) 会在按下运动控制启动器 (1) 时自动启动。

自动关闭

工具会在连续运行 45 秒后自动关闭，以维护意外启动下的电池使用寿命。工具关闭前，LED 工作灯 (4) 会快速闪烁 5 秒。

最佳使用提示

螺丝安装

- ◆ 始终使用正确类型和尺寸的螺丝起子头。
- ◆ 如果螺丝难以转紧，请尝试用小量洗涤液或肥皂作为润滑剂。
- ◆ 工具和螺丝起子头必须始终与螺丝成平行直线。

维护

Black & Decker 工具设计精良，可以长期使用，仅需极少维护。要连续获得令人满意的工作效果，需要进行合适的工具保养和定期清洁。

您的充电器除了定期清洁外，并不需要执行任何保养操作。

警告！ 在工具上执行任何保养工作之前，请取出工具内的电池。清洁之前将充电器拔下。

- ◆ 定期使用软刷或干布清洁工具和充电器内的通风槽。
- ◆ 定期使用湿布清洁电动机外壳。请不要使用任何研磨性或基于溶剂的清洁剂。
- ◆ 定期打开并轻拍夹头以清除内部粉尘。

保护环境



分类回收。本产品不得与普通家庭垃圾一起处理。

如果您发现您的 Black & Decker 产品需要进行替换，或您已经不再需要使用这些产品，请不要将它们与家庭垃圾一起处理。请将它们单独分类回收。



分类回收使用过的产品和包装能够让材料得以再循环和再利用。

再生材料的再利用有助于防止环境污染，并降低对原材料的需求。

当地法规可能要求由市政废物处理点或向您出售新产品的零售商提供从家庭中分类回收电气产品的服务。

Black & Decker 为结束使用期限的 Black & Decker 产品提供了回收与再循环的设施。若要享受这项服务，请将产品送回任一授权维修代理，他们将代表我们回收您的产品。

您可通过联系本手册中所载的当地 Black & Decker 办事处查询最靠近您的授权维修代理的位置。此外，您也可以通过网站获得授权的 Black & Decker 维修代理列表以及我们售后服务与联络方式的完整详情，网址为：www.2helpU.com

电池



耗尽电池的电力，然后从工具中取出。

- ◆ 镍镉、镍氢和锂离子电池可再循环利用。将电池送到任一授权维修代理或当地的回收站。

服务信息

Black & Decker 提供覆盖整个亚洲的公司隶属和授权服务地点。所有 Black & Decker 服务中心都具有训练有素的人员，为客户提供高效和可靠的产品服务。

不论您是需要技术建议、维修或原厂替换部件，请联系最靠近您的 Black & Decker 地点。

注

- ◆ Black & Decker 的政策是持续改进我们的产品，因此，我们保留随时更改产品规格的权利，恕不另行通知。
- ◆ 标准设备和配件可能会因为不同的国家而有所不同。
- ◆ 产品规格可能会因为不同的国家而有所不同。
- ◆ 并非所有的国家都有提供完整的产品系列。有关各产品系列的供应情况，请联系您当地的 Black & Decker 代理商。

制造商：史丹利百得精密制造（深圳）有限公司

地址：广东省深圳市宝安区石岩街道水田社区捷和工业城

