 
 
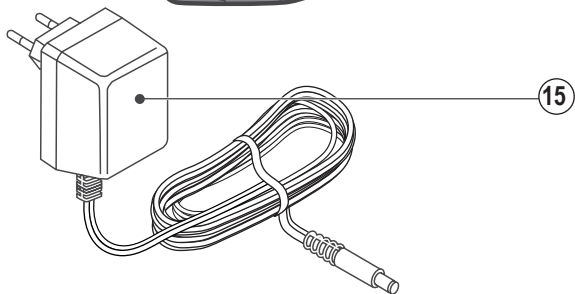 


STANLEY®

FATMAX®

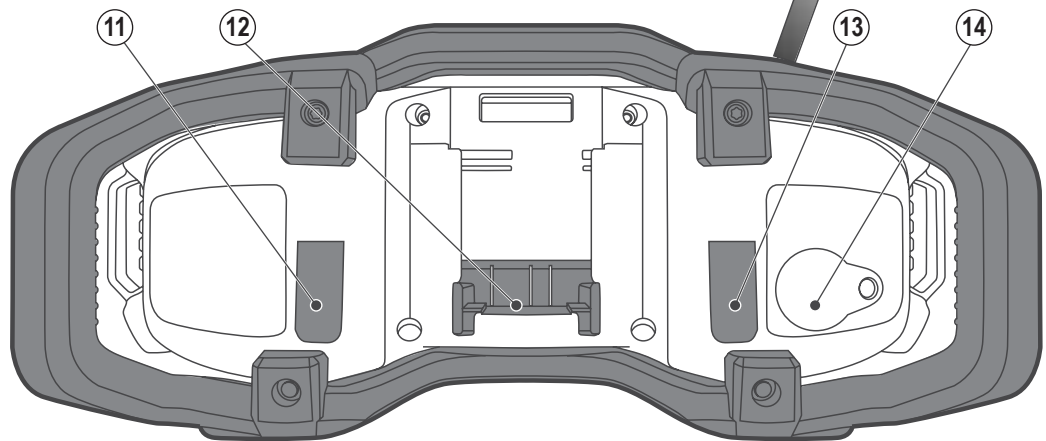

FMC770

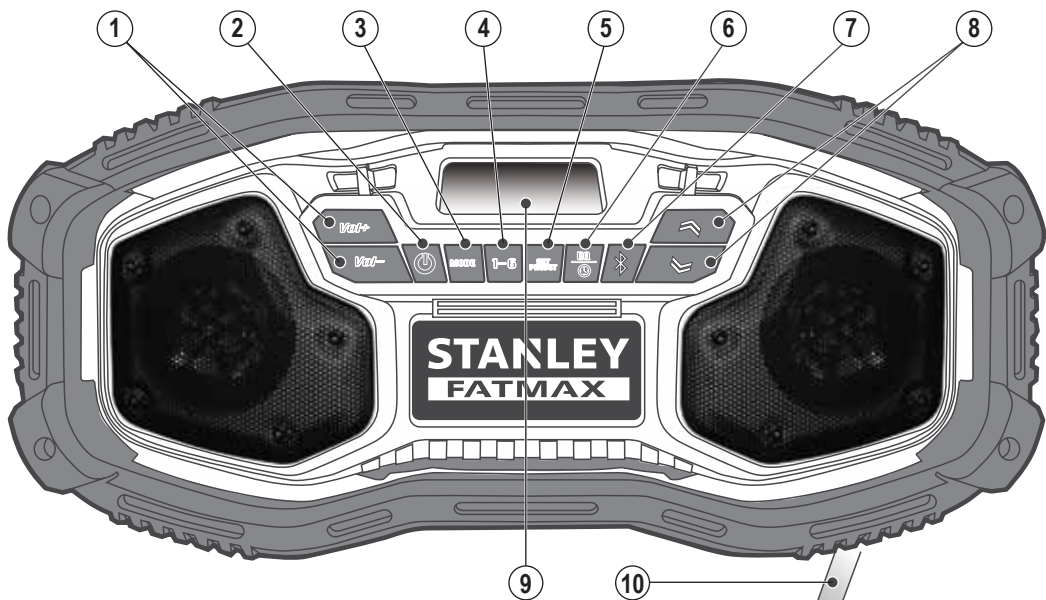

Intended use

Your Stanley FatMax FMC770 Radio has been designed for Listening to Radio Transmissions. This appliance is intended for professional and private, non professional users.

Safety instructions

General safety warnings



Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in injury.

- ◆ Read all of this manual carefully before using the appliance.
- ◆ The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Retain this manual for future reference.

Using your appliance

- ◆ The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
- ◆ No naked flame sources, such as lighted candles, should be placed on the apparatus;
- ◆ Attention should be drawn to the environmental aspects of battery disposal;
- ◆ The use of apparatus in tropical and/or moderate climates.
- ◆ Always take care when using the appliance.
- ◆ The appliance is not to be used as a toy.
- ◆ Use in a dry location only. do not allow the appliance to become wet.
- ◆ Do not immerse the appliance in water.
- ◆ Do not open body casing. There are no user serviceable parts inside.
- ◆ Do not operate the appliance in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
- ◆ To reduce the risk of damage to plugs and cords never pull the cable to remove the plug from a socket outlet.

After use

- ◆ When not in use, the appliance should be stored in a dry place.
- ◆ Children should not have access to stored appliances.
- ◆ When the appliance is stored or transported in a vehicle it should be placed in the boot or restrained to prevent movement following sudden changes in speed/direction.

Inspection and repairs

- ◆ Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- ◆ Do not use the appliance if any part is damaged or defective.
- ◆ Have any damaged or defective parts repaired or replaced by an authorized repair agent.
- ◆ Never attempt to remove or replace any parts other than those specified in this manual.

Safety of others

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Children must be supervised to ensure that they do not play with the appliance.

Residual risks.

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any rotating/moving parts.
- ◆ Injuries caused when changing any parts, blades or accessories.
- ◆ Injuries caused by prolonged use of a tool. When using any tool for prolonged periods ensure you take regular breaks.
- ◆ Impairment of hearing.
- ◆ Health hazards caused by breathing dust developed when using your tool (example:- working with wood, especially oak, beech and MDF).

Labels on appliance

The following warning symbols are found on the appliance:



To reduce the risk of injury, the user must read the instruction manual.

Additional safety instructions for batteries and chargers

Batteries (not supplied)

- ◆ Never attempt to open for any reason.
- ◆ Do not expose the battery to water.

- ◆ Do not store in locations where the temperature may exceed 40 °C.
- ◆ A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- ◆ Charge only at ambient temperatures between 10 °C and 40 °C.
- ◆ When disposing of batteries, follow the instructions given in the section "Protecting the environment".
- ◆ Do not damage/deform the battery pack either by puncture or impact, as this may create a risk of injury and fire.
- ◆ Do not charge damaged batteries.
- ◆ Under extreme conditions, battery leakage may occur. When you notice liquid on the batteries Carefully wipe the liquid off using a cloth. Avoid skin contact.
- ◆ In case of skin or eye contact, follow the instructions below.

Warning! The battery fluid may cause personal injury or damage to property. In case of skin contact, immediately rinse with water. If redness, pain or irritation occurs seek medical attention. In case of eye contact, rinse immediately with clean water and seek medical attention.

Caution! Danger of explosion if battery is incorrectly replaced. Replace only with the STANLEY FatMax battery.

Adapter

- ◆ Your adapter has been designed for a specific voltage. Always check that the mains voltage corresponds to the voltage on the rating plate.

Warning! Never attempt to replace the adapter unit with a regular mains plug.

- ◆ Have defective cords replaced immediately.
- ◆ Do not expose the adapter to water.
- ◆ Do not open the adapter.
- ◆ Do not probe the adapter.
- ◆ The adapter must be placed in a well ventilated area when being used.

Electrical safety



Your adapter is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate. Never attempt to replace the adapter unit with a regular mains plug.

Symbols on Adapter



Short circuit proof safety isolating transformer.



SMPS



The charger is intended for indoor use only.

Features

This appliance includes some or all of the following features.

1. Volume buttons
2. Power button
3. Mode button
4. Preset Toggle button
5. Set Preset button
6. Equalizer/Clock button
7. Bluetooth® button
8. Tune/Seek buttons
9. LCD display
10. Antenna
11. AC adapter port
12. 18v battery port
13. Auxillary port
14. Coin cell battery door
15. AC adapter

Use

remove plastic tab from the coin battery by pulling.

Operating the Radio

Your radio is equipped with memory capacity in order to store the time and your selected preset channels. When the radio is in the OFF position, this memory capacity is powered by one coin cell battery that is included with the radio.

To Replace Coin Cell Battery

- ◆ Do not ingest the battery, chemical Burn Hazard.
- ◆ This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. if the battery compartment does not close securely, stop using the product and keep it away from children. if you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Warning! Danger of explosion if battery is incorrectly replaced. When replacing battery, replace it with the same or equivalent type CR2032. Observe correct polarity (+ and -) when replacing batteries. Do not store or carry batteries so that metal objects can contact exposed battery terminals.

Warning! To reduce the risk of serious personal injury, turn tool off and disconnect radio from power source before installing/changing battery.

Remove the screw from the coin cell battery door (14).

Remove the door from the radio.

- ◆ Install the coin cell battery so that the writing on the battery faces out away from the radio.
- ◆ Replace the battery door and tighten screw.

Note: To reset the LCD display (9), clock and pre-sets, remove the coin cell battery and reinstall. Follow this procedure if the screen seems to lock in place.

Power/Volume Adjustment

To operate as a corded product

Insert the AC adapter (15) into the AC adapter port (11), then plug the adapter into an appropriate AC power outlet or generator.

To operate as a cordless product

Insert a fully charged 18v Stanley FatMax battery (not included) into the battery port (12). Be sure battery is fully seated.

Switching on and off

- ◆ To switch the radio on, press the power button (2).
- ◆ To switch the radio off, press the power button again (2).
- ◆ Press the top volume button (1) to increase the volume. To decrease the volume, press the bottom volume button.

Note: If the battery is attached to the radio and the AC adapter is plugged in at the same time, the radio will run off the adapter and not drain the battery. Having both attached simultaneously will not charge the battery.

Mode Function

To choose one of the mode functions (FM, AM, AUX, or Bluetooth®) push the mode button (3) until the desired function is displayed on the LCD screen. For example, if the radio is on FM, push the mode button two times to change to AUX.

Tune or Seek Function

Tune

Press the top tune/seek button (8) to quickly move the tuner up the frequency band. To move the tuner down the frequency band, press the bottom tune/seek button.

Seek

Press and hold the top tune/seek button (8), then release to quickly scan up the frequency band to the next available station. Press and continue to hold the button to seek directly

to a desired station. Press and hold the bottom tune/seek button (8), the release to quickly seek down the frequency band.

Program the Clock

The clock can be programmed with the power on or off.

- ◆ Press and hold the equalizer/clock button (6) until the hour numbers of the digital time flash on the LCD display (9), then release the equalizer/clock button.
- ◆ Press the tune/scan buttons (8) up or down to set the hour.
- ◆ When the correct hour is set, press the equalizer/clock button once so the minute numbers flash.
- ◆ Press the tune/scan buttons up or down to set the minutes.
- ◆ If you do not press a button within 5 seconds, the clock programming feature will automatically return to the previous setting.
- ◆ The Clock is set once the numbers stop flashing.

Program the Presets

6 FM and 6 AM radio stations may be independently set. After programming the buttons, pressing the "1-6" preset toggle button (4) will instantly change the frequency to the preset station.

Program the Channels

- ◆ Turn power on (2).
- ◆ Press the mode button (3) until the desired mode is selected (AM or FM).
- ◆ Tune the radio to the desired station (see Tune or Scan Function).
- ◆ Press and hold the set/preset button (5). The "Mem" icon will flash in the LCD display (9).
- ◆ Press the "1-6" preset toggle button (4) to scroll through the 6 presets.
- ◆ Once it displays the desired preset number, press the set/preset button.
- ◆ Repeat steps 3 through 6 to set the other memory buttons.

Equalizer Button

Set bass and treble

- ◆ Press the equalizer/clock button (6) once. The base equalizer will appear on the LCD display (9).
- ◆ Press the up and down volume buttons (1) to set the desired bass level.
- ◆ Press the equalizer/clock button a second time to get to the treble equalizer.
- ◆ Press the up and down volume buttons to set the desired treble level.
- ◆ Press the equalizer/clock button a third time to exit.

Note: If you do not press a button within 5 seconds, the equalizer programming feature will automatically return to the previous setting.



Using Bluetooth® Wireless Technology*

- ◆ Turn the radio on (2).
- ◆ Go to the Bluetooth settings on your Bluetooth enabled device.
- ◆ Find "P3BTR" under devices and select to pair your device. The Bluetooth symbol will flash on the LCD display (9) while the pairing takes place. Once the pairing is successful the Bluetooth symbol will remain steady.
- ◆ To listen to your Bluetooth enabled device through the radio, press the Bluetooth button (7) or press the mode button (3) until "bt" appears on the LCD display (9).
- ◆ Begin playing music on your device.

Note: The radio does not have to be in the Bluetooth mode when pairing, only when listening.

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Stanley FatMax is under license. Other trademarks and trade names are those of their respective owners.

Incoming Call

If your phone receives a call while it is connected to the radio it will ring through the radio speakers.

Samsung** When the call is answered, the caller's voice will be heard through the radio. To transfer the call to your phone, deselect the headset option on your phone. The radio will remain mute until the call is over. End the call normally with your cell phone. The radio will resume previous function.

**Samsung® is a registered trademarks of Samsung Group.

iPhone®*** When the call is answered, the call should be taken through your phone. If it is taken through the radio, transfer the call to your phone. Select "audio source" on your phone, then select "iPhone." The radio will remain mute until the call is over. End the call normally with your cell phone. The radio will resume previous function.

Important Radio Notes

- ◆ Reception will vary depending on location and strength of radio signal.
- ◆ Certain generators may cause background noise.
- ◆ AM reception will most likely be clearer when powered by a battery pack.
- ◆ To use the auxiliary port (13), plug the output jack from a CD or iPod®/MP3 player into the auxiliary port. The sound from the external source plays through the speakers.

***iPod® and iPhone® are registered trademarks of Apple Inc.

Troubleshooting

If your appliance seems not to operate properly, follow the instructions below. If this does not solve the problem, please contact your local Stanley FatMax repair agent.

Warning! Before proceeding, unplug the appliance.

Problem	Possible Solution	Possible Cause
Unit will not power on	Cord not plugged in	Plug the radio into a working outlet
	Circuit fuse is blown	Replace circuit fuse (if the product repeatedly causes the circuit fuse to blow, discontinue use immediately and have it serviced at a Stanley FatMax service centre or authorised servicer)
	Circuit breaker is tripped	Reset circuit breaker (if the product repeatedly causes the circuit breaker to trip, discontinue use immediately and have it serviced at a Stanley FatMax service centre or authorised servicer)
	Cord or switch is damaged	Have cord or switch replaced at a Stanley FatMax service centre or authorised servicer
NBC appears on the LCD window	Battery is not fully connected	Push battery fully into the battery port and ensure it is properly connected
	Battery does not have enough power	Charge battery
	Battery has been removed	Replace battery
	Adapter unplugged without battery in place	Plug adapter into outlet or properly insert battery
	Power to outlet is off when using adapter	Ensure wall outlet is receiving power or properly insert battery
Bluetooth® disconnected	Device roamed out of range	Bring device into range of radio
		Device may need to be paired to the radio again, see "Using Bluetooth Wireless Technology"

Maintenance

Your Stanley FatMax corded/cordless appliance/tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool/appliance care and regular cleaning.

Warning! Switch off and unplug the appliance before carrying out any cleaning.

- ◆ Dirt and grease may be removed from the exterior of the appliance using a cloth.

Warning! NEVER use solvents or other harsh chemicals for cleaning the non-metallic parts of the appliance. These chemicals may weaken the materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the unit; never immerse any part of the unit into a liquid.

Warning! NEVER spray or in any other way apply lubricants or cleaning solvents inside the tool. This can seriously affect the life and performance of the tool.

Service Notes

This product is not user serviceable. There are no user serviceable parts inside the radio. Servicing at an authorized service center is required to avoid damage to static sensitive internal components.

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Stanley Fat Max product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again.

Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Batteries



At the end of their useful life, discard batteries with due care for our environment:

- ◆ Run the battery down completely, then remove it from the tool.
- ◆ NiCd, NiMH and Li-Ion batteries are recyclable. Place the battery(s) in a suitable packaging to ensure that the terminals cannot be short-circuited. Take them to any authorised repair agent or a local recycling station.
- ◆ Do not short-circuit the battery terminals.
- ◆ Do not dispose of the battery(s) in a fire as this may result in a risk of personal injury or an explosion.

Technical data

Adapter		FM770B Type 1
Input voltage	V _~	230
Output voltage	V _~	18
Current	A	0.4

Battery		FMC687L	FMC688L
Voltage	V _~	18	18
Capacity	Ah	2.0	4.0
Type		Li-Ion	Li-Ion

Australia & New Zealand

Stanley Black & Decker

www.blackanddecker.com.au

Tel. 1800 338 002 (Aust) or Tel. 0800 339 258 (NZ)