



Wall Fan



First Use Safety Recommendation

Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Important Safeguards" section and also follow all detailed instructions even if you are familiar with a similar appliance.

Keep this guide handy for future reference.

FW1600


IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock, DO NOT IMMERGE the appliance, cord set or plug in water or other liquids.
- To clean, wipe the exterior with a damp cloth.
- Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
- Switch off and remove the plug from the power outlet when not in use, before assembling or disassembling parts or during cleaning. Never pull the cord.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the complete appliance to your nearest authorised service facility for examination, electrical repair, mechanical repair or adjustment.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance, make sure the extension cord is correctly wired and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it to your Black & Decker-Owned or Authorised Service Centre for repair.
- Always route the cord carefully to avoid a tripping hazard.
- Do not allow children or any person unfamiliar with these instructions use this appliance.

SAVE THESE INSTRUCTIONS

PARTS IDENTIFICATION

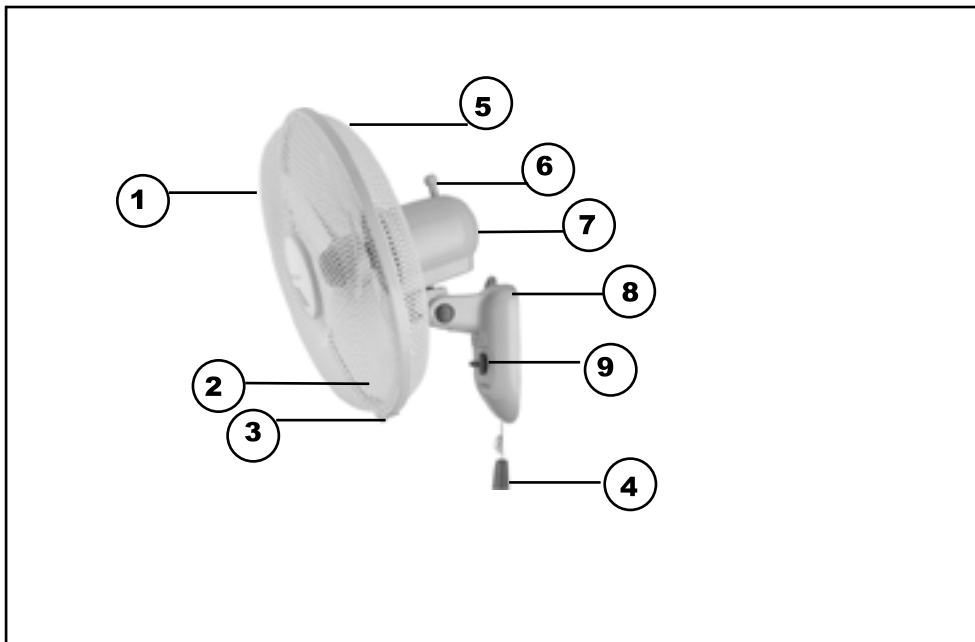

PARTS IDENTIFICATION:

1. Front Guard
2. Fan Blade
3. Locking Screw & Securing Clip
4. String(Head)
5. Rear Guard
6. Oscillation Control Knobs
7. Motor Housing
8. Mounting Base
9. Speed Switch

WALL FAN FEATURES


- * Easy reach string control for speeds and ON/ OFF functions.
- *Horizontal sweep for large coverage area.
- *Guard securing clip for your safety.
- *16" fan for better air circulation .
- *Three step speed for comfortable cooling air.

INTENDED USE

Your Black and Decker fan has been designed for indoor household use only. Remove all the parts from the packaging material and keep them aside. Ensure that you have all the parts as identified in the part identification list. Else get in touch with your nearest

FITTING AND ASSEMBLING

Make sure that your fan is switched off before connecting to or disconnecting to power supply. Ensure that the voltage rating on the base plate corresponds to the main voltage at your home.

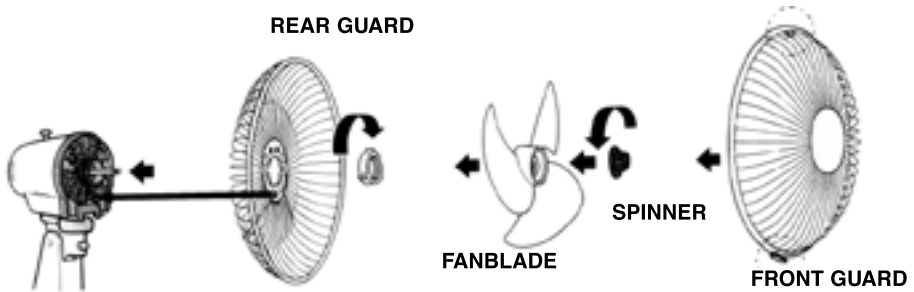

ASSEMBLING OF THE FAN:-

1. To install the rear guard, remove the blade cap and guard nut from the motor shaft. Then attach the rear guard by positioning it on the location pins on the main unit. Secure the guard to the motor body by fastening the guard nut, turning it clockwise until the guard locked into position.
2. Mount the fan blade onto the motor shaft. Fasten the blade cap by rotating it in the anti-clockwise direction until the blade is fixed firmly into place.
3. Open the securing clip at the bottom of the front guard and loosen the clip screw. Position the top clip on the uppermost part of the rear guard. Push the top clip down and press rim of the front guard onto the rear guard. Close the bottom clip and tighten the screw.



INSTALLATION OF FAN ON THE WALL:-

- *Use three screws as provided to fasten the hanger plate onto the wooden wall or post.
- *Hang the wall fan on the hanger.
- *Do not use wooden screws to install on concrete walls.
- * Ensure that your fan is properly mounted on the hanger plate by pulling the fan down-wards for a better and positive fit.

OPERATIONS:-

Make sure your fan is switched off before connecting to or disconnecting from power supply .Ensure that the voltage rating on the base plate corresponds to the main voltage at your home.


The switch has a 360° rotation

0- OFF

1-LOW

2-MEDIUM

3-HIGH

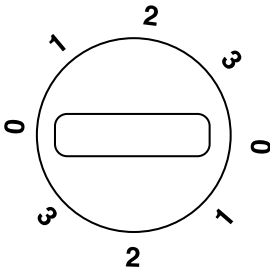

This can be operated by pulling the head string as well with every pull the switch advances to the next level of operation from 0-1-2-3 back to 0.


WARNING:-

- *Do not bring long hair or loose clothes near the fan, as they might get entangled in the fan .
- *Never use the fan without the guard in place or if the guard is damaged.

SOME DO'S AND DON'TS

- 1.Do not touch moving parts.
- 2.Always allow motor to stop before approaching the blades or changing any accessory .
- 3.Keep your fingers, long hair, loose clothes and supply cord away from moving parts.
- 4.Never pull the power cord to disconnect the plug from the socket .
5. Keep the power supply cord away from heat, oil and sharp edges.
- 6.Do not place the appliance on or near heat source or in a heated oven.
- 7.Do not use the appliance outdoors.Always protect the motor unit from water or excessive humidity.
- 8.operate the appliance only with dry hands.
- 9.If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately .Do not touch the power supply cord before disconnecting from the power supply.
- 10.When not in use, the appliance should be stored in a dry place.Children should not have access to stored appliance.
- 11.Do not cover the rear housing of the fan with any cloth or curtain.
12. Do not operate this unit in tropical climate or in areas where the temperature exceeds 40° C.

تعريف الأجزاء :

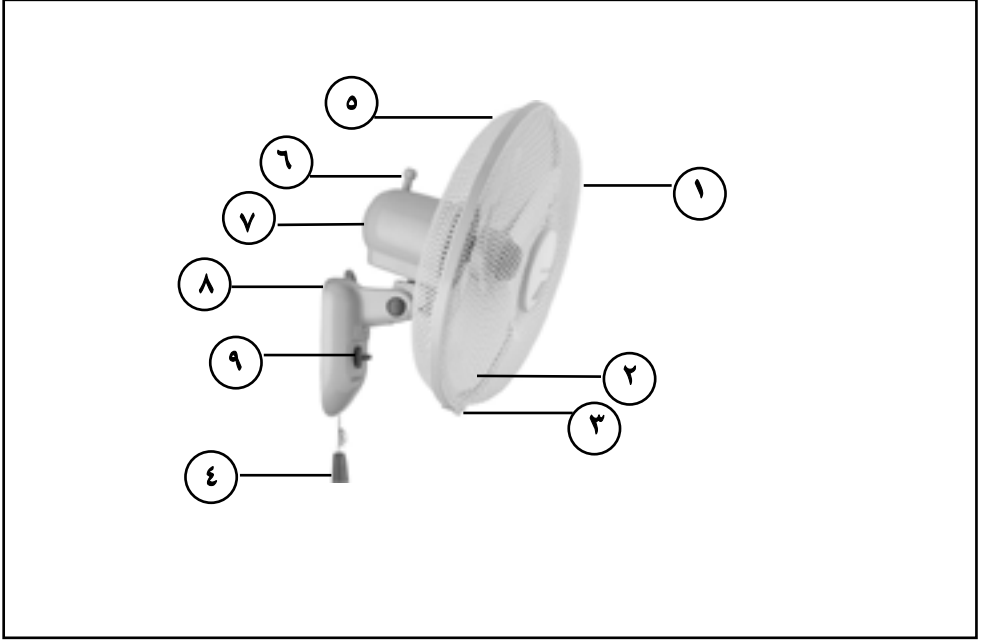

تعريف الأجزاء :

١. الواقي الأمامي
٢. شفرة المروحة
٣. مسمار القفل ومشبك الأمان
٤. (خيطة) مقبض
٥. الواقي الخلفي
٦. مقبض التحكم بطريقة الدوران
٧. غطاء المحرك
٨. قاعدة التعليق
٩. مفتاح السرعة

مزايا مروحة الحائط


- × سهولة تحكم بالسرعات ووظائف التشغيل/الإطفاء بواسطة الخيط.
- × حركة أفقية لتغطية مساحة أكبر.
- × مشبك الأمان للواقي لضمان السلامة
- × مروحة ١٦ بوصة لتوزيع الهواء بشكل أفضل
- × ثلاث سرعات لهواء بارد منعش

الاستخدامات:

تم تصميم مروحة بلاك أند ديكر للاستخدام المنزلي فقط. انزع مواد التغليف عن جميع القطع واحتفظ بها جانباً. تأكد من وجود جميع الأجزاء المذكورة في قائمة تعريف الأجزاء، أو اتصل مع اقرب وكيل خدمات بلاك أند ديكر لتقديم المساعدة.

التجهيز والتركيب :

تأكد من إغلاق المروحة قبل توصيلها أو نزعها من مصدر الكهرباء. تأكد من أن الفولطية في صفيحة القاعدة متوافقة مع الفولطية الرئيسية في منزلك.

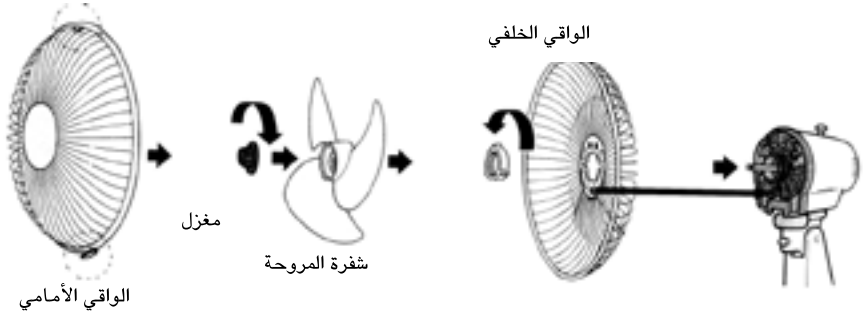

تركيب المروحة:

١. لتركيب الواقي الخلفي، انزع غطاء الشفرة وصمولة الواقي من عمود المحرك. ثم صل الواقي الخلفي بوضعه في مكانه المخصص في الوحدة الرئيسية. ثبت الواقي بجسم المحرك من خلال تثبيت صمولة الواقي، وقم بإدارته باتجاه عقارب الساعة حتى يثبت الواقي في مكانه.
٢. علق شفرة المروحة داخل عمود المحرك. وثبت غطاء الشفرة بإدارتها باتجاه عكس عقارب الساعة إلى أن تثبت الشفرة جيداً في مكانها.
٣. افتح مشبك الأمان الموجود أسفل الواقي الأمامي وحرر مسمار المشبك. ضع المشبك العلوي في الجزء الأعلى من الواقي الخلفي. اكبس المشبك العلوي للأسفل واضغط حافة الواقي الأمامي باتجاه الواقي الخلفي. اغلق المشبك السفلي وقم بشد المسمار.



تركيب المروحة على الجدار:


- استخدم المسامير الثلاثة لتثبيت صفيحة العلاقة على الجدار الخشبي أو العمود.
- علق مروحة الجدار على العلاقة.
- لا تستخدم المسامير المخصصة للخشب للتركيب على الجدران الأسمنتية.
- تأكد من تعليق المروحة بشكل جيد على صفيحة العلاقة بسحب المروحة باتجاه الأسفل لعملية تثبيت أفضل وقوية.

التشغيل:

تأكد من إغلاق المروحة قبل توصيلها أو نزعها من مصدر الكهرباء. تأكد من أن الفولطية في صفيحة القاعدة متوافقة مع الفولطية الرئيسية في منزلك.

يمتاز مفتاح التشغيل بحرية الحركة ٣٦٠ درجة

- ٠- إغلاق
- ١- منخفض
- ٢- متوسط
- ٣- عالي

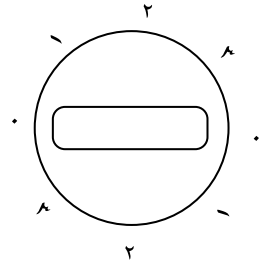

يمكن التشغيل بواسطة سحب مقبض الخيط إضافة إلى أنه مع كل عملية سحب للخيط يتحرك المفتاح إلى المستوى التالي من التشغيل من ٠-١-٢-٣ وعودة إلى ٠.

تحذيراً!

- احذر ملامسة الشعر الطويل أو الملابس للمروحة، فقد تعلق بها.
- لا تستخدم المروحة بدون وجود الواقي في مكانه أو عند تلف الواقي.

بعض المحاذير والإرشادات:

١. لا تلمس الأجزاء المتحركة.
٢. اسمح للمحرك دائماً بالتوقف قبل الاقتراب من الشفرات أو تبديل أي ملاحق.
٣. ابعد أصابعك، الشعر الطويل، الملابس والسلك الكهربائي عن الأجزاء المتحركة.
٤. لا تسحب السلك الكهربائي لفصل القابس من مأخذ الكهرباء.
٥. ابعد السلك الكهربائي عن الحرارة، الزيوت والأطراف الحادة.
٦. لا تضع الجهاز على أو بجانب أي مصدر حراري أو على موقد ساخن.
٧. لا تضع الجهاز في الخارج. وفر الحماية دائماً لوحدة المحرك من الماء أو الرطوبة الزائدة.
٨. شغل الجهاز باستخدام أيدي جافة.
٩. في حالة تلف السلك الكهربائي أثناء الاستخدام، افصل الجهاز من مصدر الكهرباء فوراً. لا تلمس السلك الكهربائي قبل فصل مصدر الطاقة.
١٠. في حالة عدم التشغيل، يجب حفظ الجهاز في مكان جاف. يجب حفظ الأجهزة بعيداً عن متناول الأطفال.
١١. لا تقم بتغطية الغطاء الخلفي من المروحة باستخدام أي قطعة قماش أو ستارة.
١٢. لا تقم بتشغيل هذه الوحدة في الأجواء الاستوائية أو المناطق التي تزيد درجة الحرارة فيها عن ٤٠ درجة مئوية.

ضمان شامل لمدة سنتين لأدوات BLACK & DECKER المنزلية

تمنح Black & Decker ضمان شامل لمدة سنتين للمنتج اعتباراً من تاريخ الشراء، يسري الضمان علي عيوب التصنيع أو عيوب المواد الداخلة في التصنيع. في حالة إصابة المنتج بأي عطل زفناء فترة الضمان، فإن لشركة Black & Decker حرية الاختيار إما إصلاحه أو استبداله بدون أي تكافة.

لا يغطي الضمان الأعطال الناتجة عن الحوادث، سوء الاستعمال، الإهمال، الاستعمال الخاطي، أو عدم اتباع النظم المعمل بها؟ البيا. كذلك، لا تنطبق شروط الضمان إزاتكم صيانة أو تصليح المنتج لدي طرف غير معتمد من قبل شركة Black & Decker ، أو عند استخدام قطع غيار بدون الرجوع أو أخذ موافقة الشركة وتسببت هذه القطع في العطل إذا توقف إنتاج أي طراز مع عدم وجود البديل المناسب، فإن لشركة Black & Decker الحرية في إصلاح المنتج أو استبداله بطراز آخر ذو نفس القيمة الشرائية.

إتمام عمالية الشراء

إملاً بطاقة تسجيل الضمان مع التأكد من وجود الختم الأصلي للوكيل المعتمد (وتوضيح تاريخ الشراء) ثم أرفق بإصال الشراء بالبطاقة. الرجاء الاحتفاظ بهما لإبرازهما في حالة المطالبة في المستقبل.

عملية المطالبة

خذ المنتج المعطل مع بطاقة الضمان وإصال الشراء بنفسك إلي مركز الصيانة المحلي. أو يمكنك إرساله بالبريد. في حالة الإرسال بالبريد أو الشحن: تأكد من تفريغ المنتج من الماء كلياً وقم بتغليفه جيداً في صندوق كرتون مقوي مع إضافة مواد تغليف لملاً الفراغات لتفادي الإصابة بأي ضرر. أفق شرح موجز للمشكلة وتأكد من إعطاد اسمك وعنوان المراسلة

صممت من أجل الاستعمال المحلي فقط.

BLACK & DECKER HOME APPLIANCE 2 YEAR WARRANTY

Black & Decker provides a 2 Year Warranty for this product from the date of purchase against defects due to defective materials or workmanship. Motor/element burn-outs due to voltage fluctuations are not covered under warranty. If the product should become defective within the warranty period, Black & Decker will repair or (at Black & Decker's discretion) replace it free of charge.

The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non observation of local regulations on the part of the user. Equally, the warranty provisions do not apply where the appliance has been serviced by a person not authorised by Black & Decker or serviced with non-approved parts and this has contributed to the fault of the product. Superseded models without a replacement equivalent will either be repaired or (at Black & Decker's discretion) replaced with another product of similar retail value.

UPON PURCHASE

Fill in the Warranty Registration Card with the original Authorised Dealer's stamp (indicating date of purchase) and attach your purchase receipt to it. Retain in case of claims in the future.

MAKING A CLAIM

Take your defective product together with the Warranty Registration Card & purchase receipt to your local service Centre. You can either do this in person or send it freight prepaid. If mailing or shipping your appliance, ensure and remove all the water and pack it carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the service Centre and be sure to give your return address.

DESIGNED FOR DOMESTIC PURPOSES ONLY.

Names & Addresses of Black & Decker Houseware Service Concessionaires

Afghanistan - Ishan National Company, Opp. Ministry of Justice, Kabul. Tel.:932-2101727 **Algeria** - SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. Tel.:+21321-364363/508 Fax:+21321-369667. **Bahrain** - Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama Tel.:+973-715252/712756 Fax:+973-713789. **Bangladesh** - Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka, 1230.Tel.:+8802-8919272/9756 Ext.28 Fax:+8802-9887167. **Egypt** - Anasia Egypt for Trading S. A. E. P.O. Box: 2443, 110 Mostafa Refaat St, Sheraton, Heliopolis 11361, Cairo. Tel.:+202-2684159 Fax:+202-2684169. **Ethiopia** - Tewfik Sherif & Co. Ltd., P.O. Box 5583, Debre Zeit Road, Addis Ababa. Tel.:+2511-651700/601 Fax:+2511-650570. **India** - Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase 1, New Delhi-110020. Tel.:+9111-26372602-4 Fax:+9111-26372601. **Iran - Tehran** - Service Centre of Iran, No 510, South Karger Ave, Below Pasteur Sq. Tehran. Tel.:+9821-6490608/0656/6407672 **Iran - Kish Island** - Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. Tel./Fax:+98-76444-22894. **Jordan** - Bashiti Hardware, P.O. Box 1564, TLA Ali, Amman. Tel.:+9626-535009/4770741 Fax:+9626-5350012/4789783. **Kenya** - Zyllog Enterprises, IPS Building, Kaunda Street, P.O.Box 40877, Nairobi. Tel.:+2542-338188/199 Fax:+2542-330642. **Kuwait** - Al Omar Technical Co., P.O. Box 4062, 13041 Safat, Kuwait. Tel.:+965-4848595/0039 Fax:+965-4845652. **Lebanon** - Est. F. A. Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. Tel.:+9611-255860/6 Fax:+9611-255891. **Libya** - El Ghoul Brothers, P.O.Box 348, Islamic Call Bldg. Office 201-202, Benghazi. Tel.:+21861-9097681/4183 Fax:+21861-9094123. **Madagascar** - Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. Tel.:+26120-2264505 Fax:+26120-2264244. **Malta** - John G. Cassar Ltd., 36 Victory Str, Qormi QRM 06, Malta. Tel.:+35621-493251 Fax:+35621-483231. **Mauritius** - Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O. Box 429, Port Louis. Tel.:+230-2076700 Fax:+230-2337330/7400. **Nepal** - Universal Trading Centre, P.O. Box 1947, Tripureswor, Kathmandu. Tel.:+9771-262192/260587/785 Fax:+9771-261154. **Nigeria** - Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. Tel.:+2341-3201778 Fax:+2341-2613667. **Oman** - OMASCO, P.O. Box 2734, Ruwi, Muscat. Tel.:+968-560232 Fax:+968-560255 **Pakistan** - Lahore-Electronics Inn. 212-G Raja Centre, Main Market, Gulberg, Lahore Tel.:+9242-5756750. **Philippines** - Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Extension, between 2nd and 3rd Ave. Kalookan City Tel.:+632-3664487 Fax:+632-3664489. **Qatar** - Al Muftah Trading & Cont., P.O. Box 875, Doha. Tel.:+974-4650880/4446868 Fax:+974-4444145. **Saudi Arabia - Dammam** - Ebrahim Fawaz Al Zayani, P.O. Box 76026, Al Raka, Dammam. Tel.:+9663-8140914 Fax:+9663-8140824. **Jeddah** - Anasia, P.O. Box 50959, Jeddah - 21477. Tel.:+9662-6710014 Fax:+9662-6725929. **Jeddah** - EAC (Al Yousuf), P.O. Box 50959, Jeddah-21477. Tel.:+9662-6519912 Fax:+9662-6511153. **Madina** - Garziz Trad. for Bldg. Mat. & Decor., P.O. Box 30377, Jeddah-21477. Tel.:+9664-8261490/8227636 Fax:+9664-8265741. **Riyadh** - Anasia, P.O. Box 76026, Al Raka, Dammam Tel.:+9662-6710014 Fax:+9662-6725929 **Yanbu** - Bin Afif, P. O. Box 530 Yanbu, Al Bahr. Tel.:+9664-3222626/8867 Fax:+9664-3222210. **Sri Lanka** - Delmege General Equip. Pvt. Ltd., 297, No. 428/1AT. B., Jaya Mawatha (Darley Road), Colombo-10. Tel.:+9411-2665914 Fax:+9401-2665915. **Sudan** - United Distribution Company, Sayed Addel Rehman Street, P. O. Box 325, Khartoum. Tel.:+24911-772612/777296 Fax:+24911-770919. **Tanzania** - General Motors Investment, 14 Vingungu Nyerere Road, P.O Box 16541, Dar Es Salaam. Tel.:+25522-2862661/5022 Fax:+25522-2862667/5412/3. **Tunisia** - SFax - Techni-Sud, 68, Rue d'Algerie, Sfax. Tel.:+2164-226335. **UAE - Abu Dhabi** - Light House Electric., P.O.Box 120, Abu Dhabi. Tel.:+9712-6726131 Fax:+9712-6720667. **Dubai** - Black & Decker (O) A.G., P.O. Box 5420, Dubai. Tel.:+9714-7028234/233 Fax:+9714-2822765. **Dubai** - Ideal Machinery & Equipmt. R. Workshop, P.O.Box 37116, Al Quoz, Dubai. Tel.:+9714-3474160 Fax:+9714-3474157. **Sharjah** - McCoy Middle East LLC, P.O. Box 20228, Sharjah. Tel.:+9716-5336321 Fax:+9716-5336320. **Uganda** - The Building Centre, Kitgum House, 52 Station Road, P.O. Box, 7436, Kampala. Tel.:+25641-234567 Fax:+25641-236413. **Yemen - Aden** - METCO Ltd. Mulla Dakka, Aden. Tel.:+9672-240950 Fax:+9672-240952. **Sana'a** - METCO Ltd., P.O.Box 12363, Hayel Street, Sana'a. Tel.:+9671-204201 Fax:+9671-204204. **Taiz** - METCO Ltd. Campa Area, Near Al Kair Mosque. Tel.:+9674-231610/232033 Fax:+9674-219869. **Zimbabwe** - J.D.Distributors, P.O. Box 226, 17 Bessemer Road, Graniteside, Harare. Tel.:+2634-753913/4/5/6/7 Fax:+2634-753918.



WARRANTY REGISTRATION CARD

YOUR NAME / الاسم _____

YOUR ADDRESS / العنوان _____

POSTCODE / الرمز البريدي _____

DATE OF PURCHASE / تاريخ الشراء _____

DEALER'S NAME & ADDRESS / اسم وعنوان البائع _____

PRODUCT MODEL NO. **FW1600**