



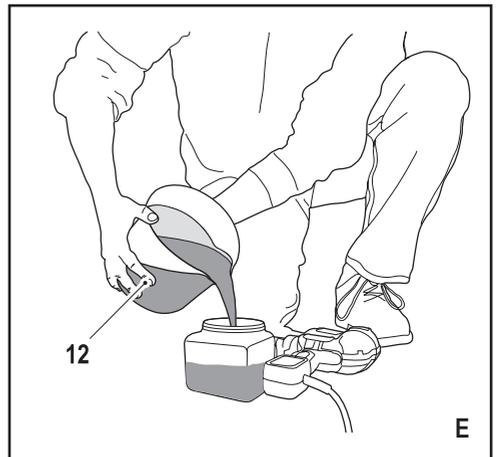
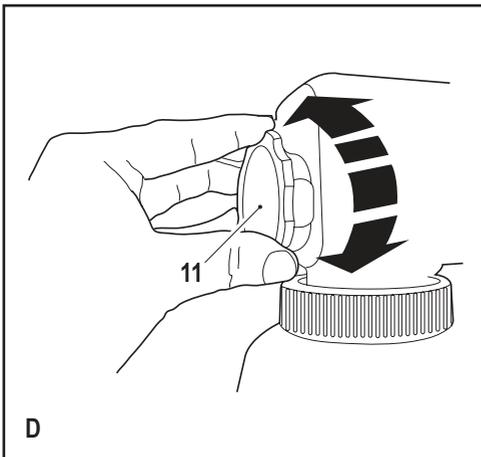
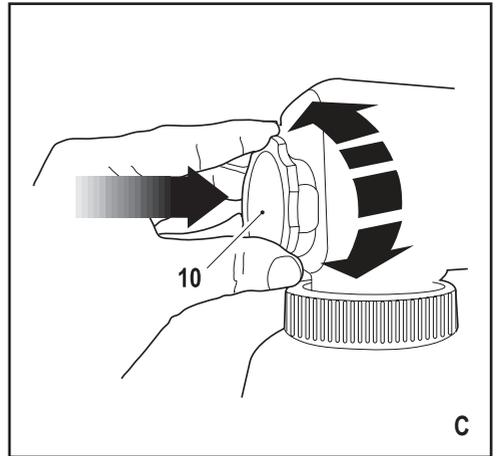
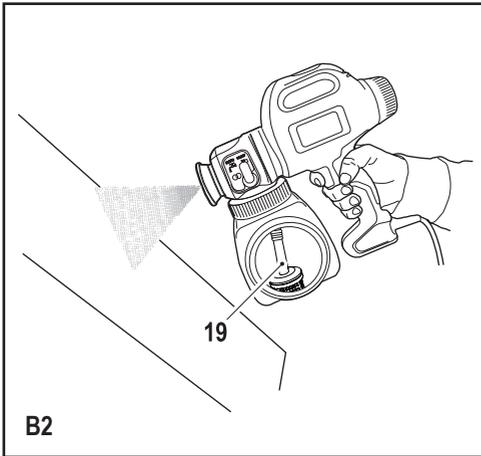
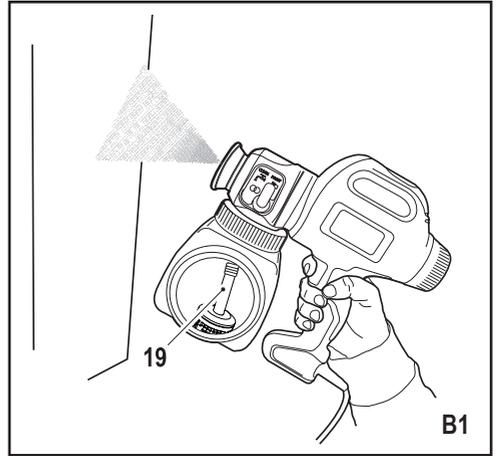
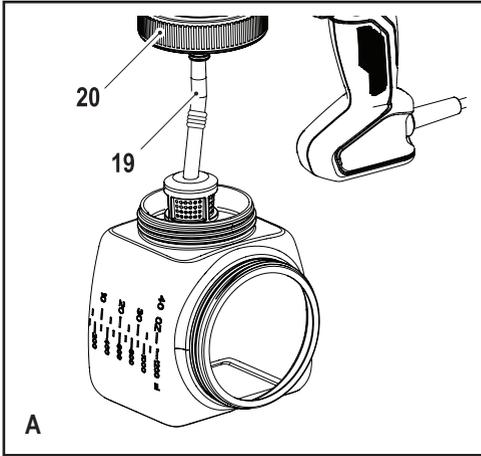
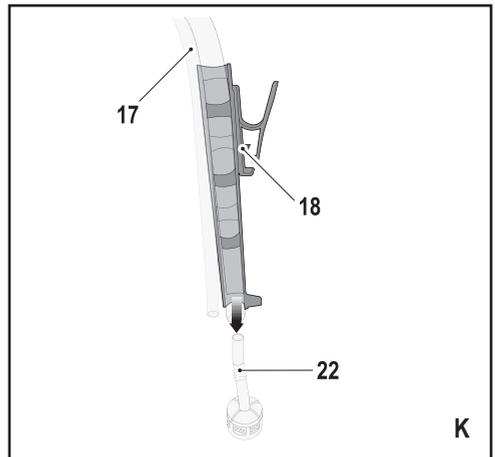
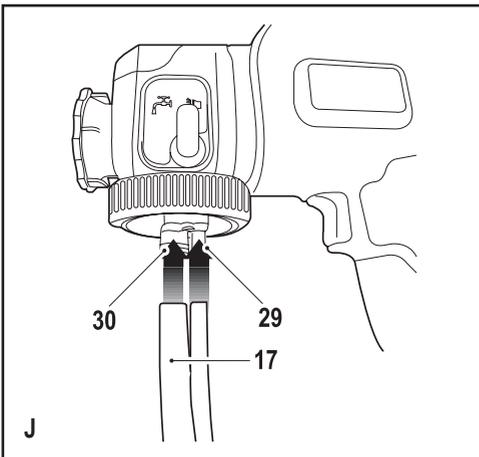
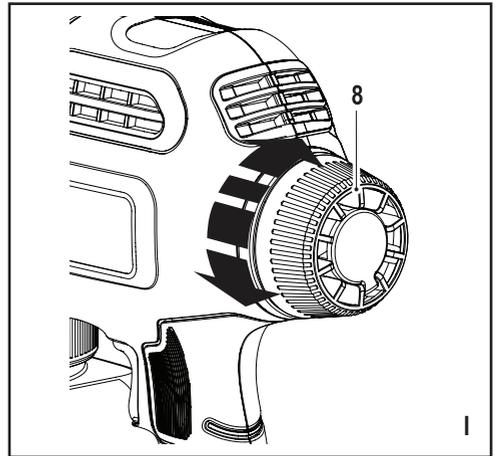
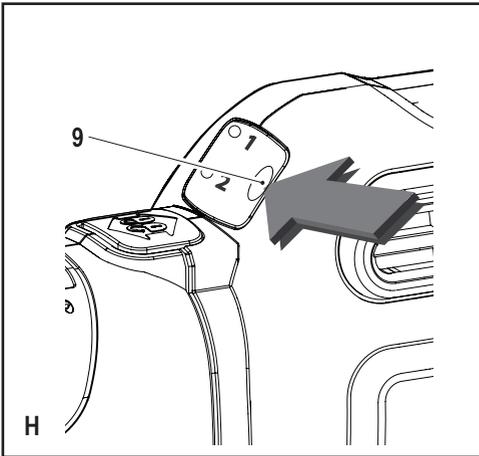
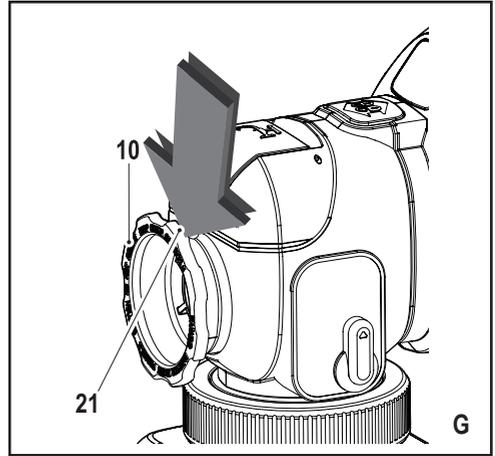
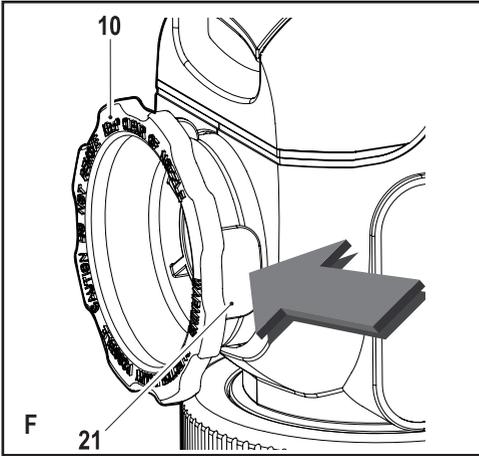
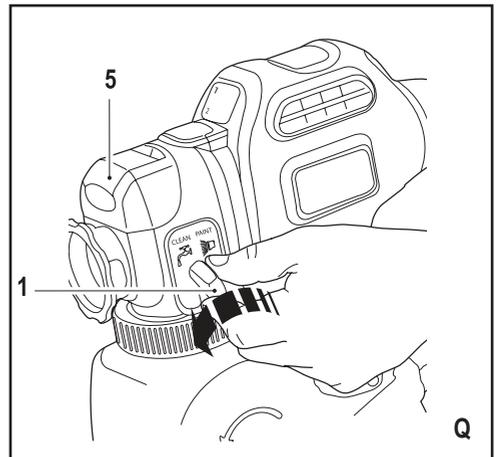
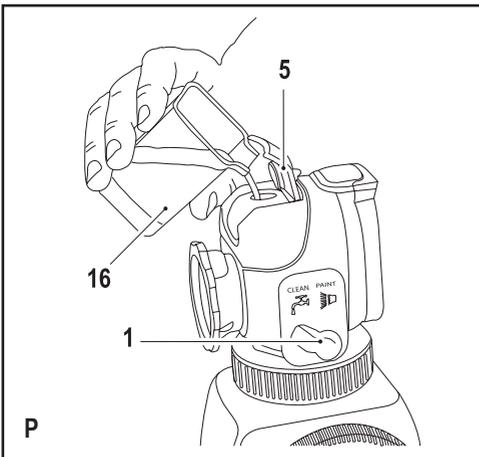
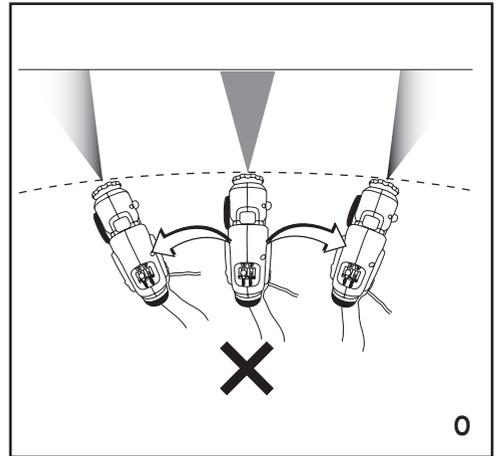
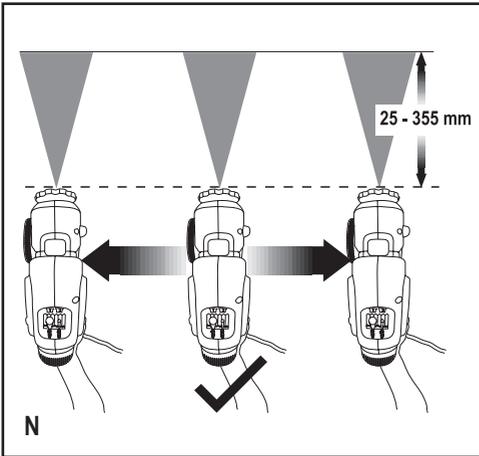
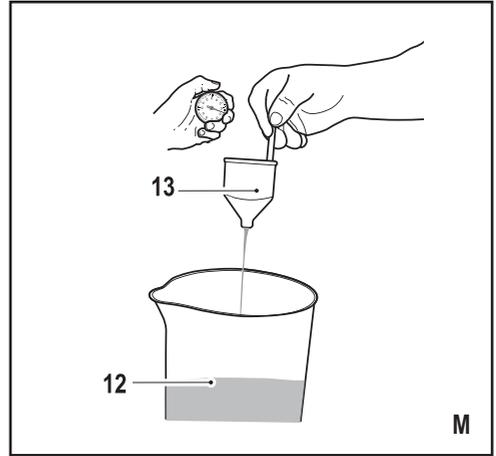
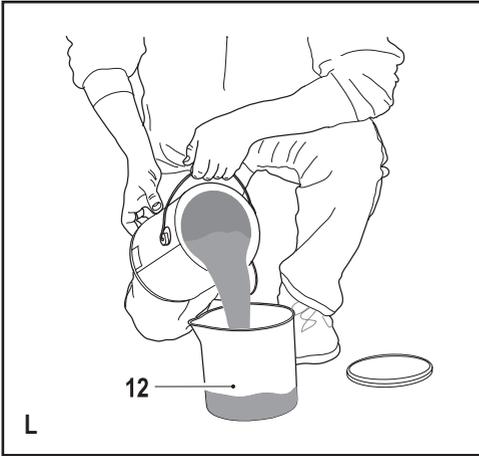
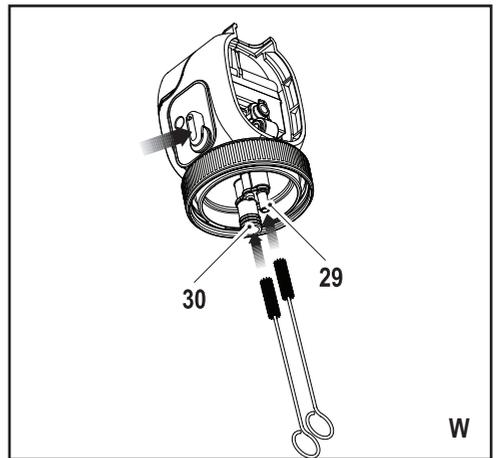
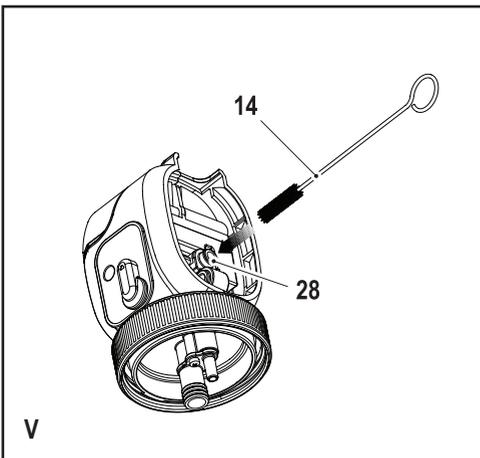





BDPS200
BDPS400
BDPS600

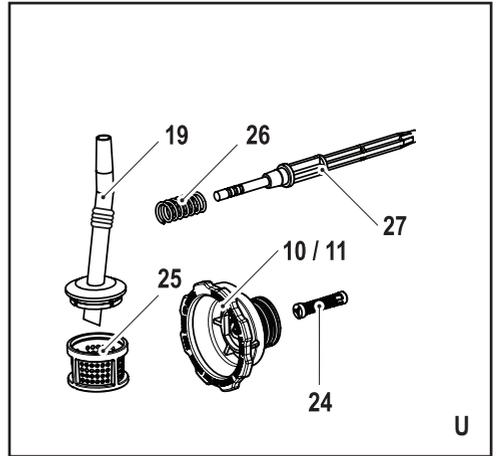

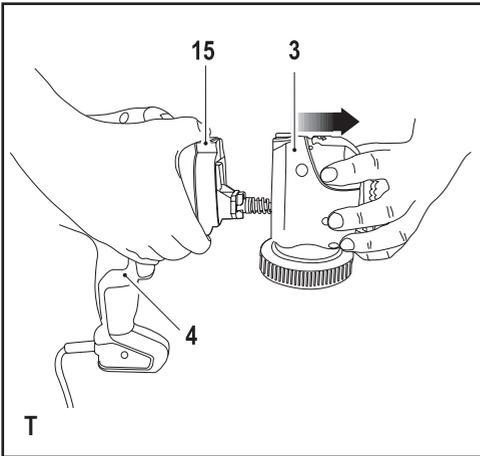

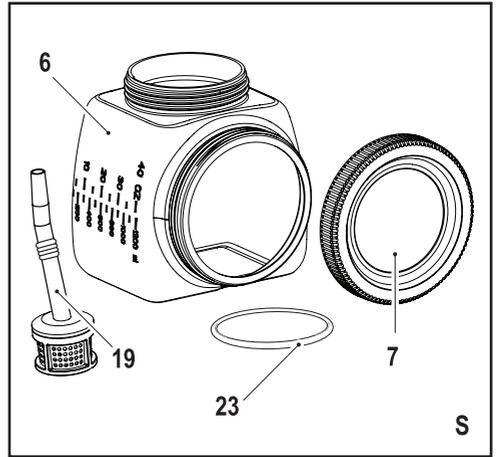

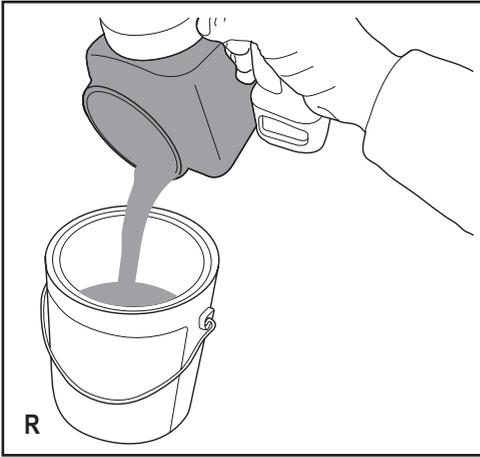

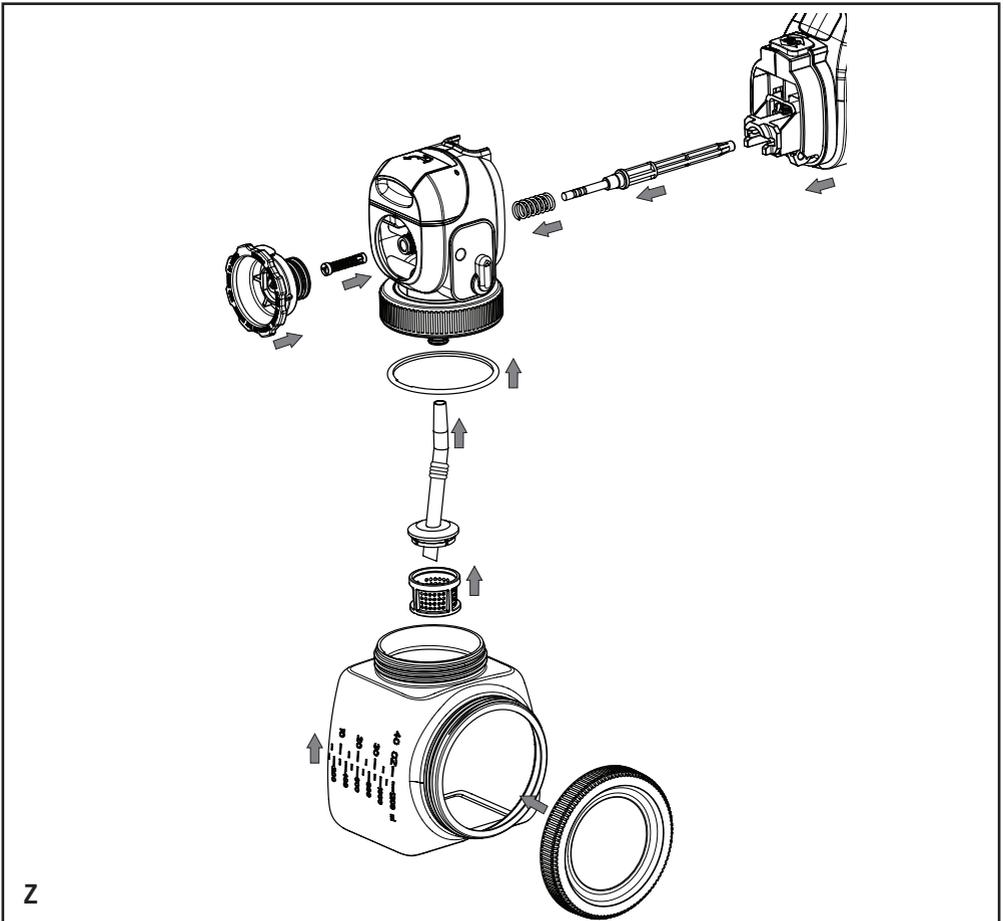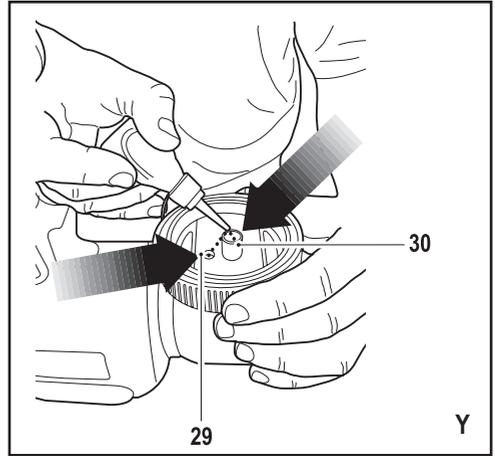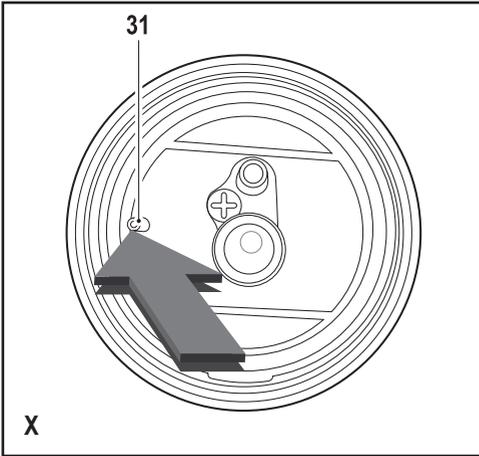

Intended use

Your Black & Decker floor based fine spray system is intended for atomising solvent based and water based paints, finishes, primers, clear finishes, automotive finishes, staining sealers, wood sealer-preservatives. The power tool is not suitable for spraying caustic solutions, acidic coating materials, coating materials with granules or solids as well as spray and drip-impeding materials. This appliance is intended for consumer use only.

Safety instructions

General power tool safety warnings



Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

1. Work area safety

- Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.

- When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
 - If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.
- ### 3. Personal safety
- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
 - Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
 - Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
 - Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
 - Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
 - Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
 - If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- ### 4. Power tool use and care
- Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
 - Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- c. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
 - d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
 - e. **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
 - f. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
 - g. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
5. **Service**
- a. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

Additional safety instructions

Warning!

- ◆ Read all instructions and safety precautions for equipment and spray material before operation any equipment.
- ◆ Comply with all appropriate local, state and national codes governing ventilation, fire prevention and operation.
- ◆ Keep sprayer out of reach of children.
- ◆ Hearing protection is recommended for extended use.
- ◆ Use eye protection to keep particles out of eyes.

Hazardous vapours

Insecticides and other materials may be harmful if inhaled causing severe nausea, fainting or poisoning.

- a. **Use a respirator or mask whenever there is a chance that vapours may be inhaled. Read all instructions with the spray material and mask to ensure that it will provide the necessary protection against the inhalation of harmful vapours.**

Additional safety instructions for paint sprayers

Warning!

- ◆ Before any use, be sure anyone using this sprayer reads and understands all safety instructions and other information contained in this manual.

- ◆ Do not use caustic (alkali) self heating or corrosive (acid) liquids in this sprayer as these can corrode metal parts or weaken hose and seals.
- ◆ Do not use hot or boiling liquids in sprayer as this may weaken tank and hose.
- ◆ Do not leave residue or spray material in the tank after using sprayer.
- ◆ Do not smoke while spraying or spray where spark of flame is present.
- ◆ Do thoroughly inspect both inside and outside of sprayer before each use.
- ◆ Do empty, clean and drain both tank and hose after each use according to directions.
- ◆ Do not use guns for spraying flammable materials.
- ◆ Do not spray any material where the hazard is not known.
- ◆ Use only non-flammable liquids.
- ◆ Do not clean guns with flammable materials.

Personal safety

- a. **Additional personal safety equipment such as appropriate gloves and a respirator or mask must be used when handling chemicals.** Safety equipment used for appropriate conditions will reduce personal injuries.
- b. **Do not spray yourself, any person or animal. Keep hands and other body parts away from the discharge. In case of skin injection, seek medical attention immediately.** The sprayed material may pierce the skin and be injected to your body.
- c. **Do not treat injection as a simple cut.** Spray is able to inject toxins into the body and cause serious bodily injury. In the event that injection occurs, seek medical attention immediately.
- d. **Beware of any hazards presented by the material being sprayed. Consult the markings on the container or the information supplied by the manufacturer of the material to be sprayed, including requirements for the use of personal protective equipment.** Manufacturer's instructions must be followed to reduce the risk of fire and personal injury, derived from toxins, carcinogens, etc.

Safety of others

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- ◆ Children should be supervised to ensure that they do not play with the appliance.

Residual risks.

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any moving parts.
- ◆ Injuries caused by touching any hot parts.
- ◆ Injuries caused when changing any parts or accessories.
- ◆ Injuries caused by prolonged use of the appliance. When using any appliance for prolonged periods ensure you take regular breaks.

Vibration

The declared vibration emission values stated in the technical data and the declaration of conformity have been measured in accordance with a standard test method provided by EN 60745 and may be used for comparing one tool with another. The declared vibration emission value may also be used in a preliminary assessment of exposure.

Warning! The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used. The vibration level may increase above the level stated.

When assessing vibration exposure to determine safety measures required by 2002/44/EC to protect persons regularly using power tools in employment, an estimation of vibration exposure should consider, the actual conditions of use and the way the tool is used, including taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time.

Labels on the appliance

The following pictograms are shown on the tool:



Warning! To reduce the risk of injury, the user must read the instruction manual.



Warning! Do not expose the appliance to rain or high humidity.



Warning! Keep bystanders away.



Warning! Wear safety glasses or goggles when operating this tool.



Warning! Wear a respirator or mask.



Warning! Use only non-flammable liquids.

Electrical safety



Warning! This product must be earthed. Always check that the power supply corresponds to the voltage on the rating plate.

Power plugs must match the outlet. Never modify the plug in any way. Unmodified plugs and matching outlets will reduce risk of electric shock.

- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Black & Decker Service Centre in order to avoid a hazard.

Extension cables & Class 1 product

- ◆ A 3-core cable must be used as your appliance is earthed and of Class 1 construction.
- ◆ Up to 30m (100 ft) can be used without loss of power.
- ◆ Electric safety can be further improved by using a high-sensitivity 30 mA residual current device (RCD).

Features

This appliance includes some or all of the following features.

1. Quick clean lever
2. Spray trigger
3. Sprayer
4. Power unit
5. Quick clean door
6. Side fill canister
7. Lid
8. Flow control knob
9. Speed control switch
10. Green fan spray nozzle (BDPS400 & BDPS600 only)
11. Blue cone nozzle
12. Mixing bucket (BDPS600 only)
13. Viscosity cup
14. Cleaning bush
15. Sprayer release button
16. Quick clean fill cup (BDSP600 only)
17. Paint can clip (BDSP600 only)
18. Direct to tin hose (BDSP600 only)

Assembly

Warning! Before assembly, make sure that the tool is switched off and unplugged.

Attaching the side fill canister (fig. A)

The side fill canister is designed so it will only fit one way round.

- ◆ Align the side fill canister (6) below the pick up tube (19) with the lid (7) to the left.
- ◆ Push the side fill canister (6) firmly into place.
- ◆ Tighten the locking ring (20) by turning it clockwise.

Note: Ensure that the locking ring is tight and that the side fill canister is firmly secured in place.

Aligning the pickup tube (fig. B1 & B2)

The pickup tube can be aligned in the direction that you will be doing the most spraying to help minimize the amount of times that you will have to refill the canister.

- ◆ If you are spraying at an upward angle or straight on, position the pickup tube (fig. B) toward the back of the canister.
- ◆ If you are spraying at a downward angle, position the pickup tube (fig. C) toward the front of the canister.

This will ensure you spray as much material as possible before you need to refill.

Attaching and removing the spray nozzels (fig. C & D)

To attach the green fan spray nozzle: (Where supplied)

- ◆ Turn the nozzle (10) clockwise onto the spindle for 6 - 8 full turns.
- ◆ Push in the nozzle (10) and continue to turn it clockwise until it is fully seated.

Note: Ensure the spray nozzle is completely threaded on by hand only. If it is not fully seated in can leak or damage the nozzle.

To remove the green fan spray nozzle: (Where supplied)

- ◆ Push in the nozzle (10) and turn it anticlockwise.

To attach the blue cone spray nozzle:

- ◆ Turn the nozzle (11) clockwise onto the spindle until it is fully seated.

Note: Ensure the spray nozzle is completely threaded on by hand only. If it is not fully seated in can leak or damage the nozzle.

To remove the blue cone spray nozzle:

- ◆ Turn the nozzle (11) anticlockwise.

Filling the canister (fig. E)

- ◆ Check to make sure that the side fill canister (6) is completely screwed onto the sprayer.
- ◆ Lay the sprayer on its side with the canister side lid facing up.
- ◆ Pour the properly thinned and strained material to be sprayed into the side fill canister.

Note : Use a mixing bucket to pour material from the original material container into the side fill canister.

- ◆ Clean any residual liquid from the threads or sides of the canister and sprayer.
- ◆ Starting the threads evenly, screw the lid completely onto the side fill canister. Check the lid to make sure it is threaded on squarely and completely before picking up the sprayer.

Use

Switching on and off

The sprayer is turned on and off with the spray trigger.

- ◆ To turn the sprayer on, squeeze the spray trigger (2).
- ◆ To turn the sprayer off, release the spray trigger (2).

Warning! Never point the sprayer at any part of the body. Never pull the trigger while adjusting the spray setting.

Selecting the spray pattern (fig. F & G) (BDPS400 & BDPS600 Only)

This sprayer is supplied with 2 nozzles which are capable of producing 3 spray patterns. .

	Green nozzle - Horizontal Flat Jet - Apply up and down a surface.
	Green nozzle - Vertical Flat Jet - Apply side to side.
	Blue nozzle - Circular Jet - for corners, edges and narrow surfaces.

- ◆ To select the cone spray pattern, fit the blue cone nozzle.
- ◆ To select the horizontal fan spray pattern, fit the green fan spray nozzle and turn the nozzle so so the jet indicator tabs (21) are in the vertical position (fig. F).
- ◆ To select the Vertical fan spray pattern, fit the green fan spray nozzle and turn the nozzle so so the jet indicator tabs (21) are in the horizontal position (fig. G).

Warning! Never point the sprayer at any part of the body. Never pull the trigger while adjusting the spray setting.

Two speed control switch (fig. H) (BDPS600 only)

Your sprayer has two different speed settings.

- ◆ To change speeds, press the speed control switch (9). An LED indicates setting 1 or 2.
- ◆ Set the flow control knob (8) to a lower or medium setting (1-5) when on speed setting 1.
- ◆ Set the flow control knob (8) to medium or higher setting (5-9) when on speed setting 2.

Use the lower speed setting (Setting 1) to obtain greater control over your spraying project, while the higher speed (Setting 2) allows for greater coverage in a shorter amount of time.

The lower speed level allows you to get closer to your work with less overspray. Low setting works well with lighter bodied or more free flowing paints like stains and sealers.

More heavy bodied paints, like water based latex, will need setting number 2

Use the speed control setting in conjunction with the flow control knob and test for what works best with your material being sprayed.

Flow control knob (fig. I)

The flow control knob regulates the amount of liquid that can be sprayed.

- ◆ Turn the flow control knob (8) clockwise to increase the flow of liquid
- ◆ Turn the flow control knob (8) counterclockwise to decrease the flow of liquid.

Note : Always test the spray pattern on scrap cardboard or similar material first. Begin with flow control knob on the highest flow setting. If less flow is desired, dial the flow control knob in. Heavier, thicker materials should be sprayed with the higher settings 7 - 9. Thinner materials should be sprayed with the lower settings 1 -3.

Note : If the flow control setting is set completely to the minimum side, the trigger will have limited or no travel. Back the flow control knob off (clockwise) to allow for more trigger travel.

Direct to tin hose (fig. J & K) (BDPS600 only)

It is possible to use the BDPS600 with out the side fill canister. When using the supplied 'direct to tin hose' you can take the paint supply directly from the paint tin.

- ◆ Remove the sidefill canister (6), pickup tube (19) and filter (25).
- ◆ Push the suction hose onto the intake (30) and return (29) ports.
- ◆ Pull the hose apart on the opposite end and slide the larger hose (17) completely through the container clip (18), then over the barbs (22) of the pickup tube (19).
- ◆ Place the suction tube assembly into the material container and attach the container clip securely to the side. Check to make sure that complete assembly is submerged in the material container.

Liquid material preparation (fig. L & M)

Note : Make sure the type of material you use can be cleaned with either mineral spirits or paint thinner (for oil-based paints) or a warm water and soap solution (for water soluble paints like latex). Use drop cloths to protect your floors and anything else in the spraying area that you wish to remain untouched. The liquid being sprayed may need to be thinned (diluted) before starting. When thinning, use the proper liquid thinner recommended on the container by the material manufacturer.

Warning! Do not use materials with a flashpoint lower than 55°C.

Note : A mixing bucket (12) is provided (BDPS600 only) to use when transferring spray material from the original container into the bucket for thinning and measuring purposes (fig. L).

Note : A viscosity cup (13) is provided to determine the "runout time" of the material being used.

- ◆ Before measuring for the proper viscosity, stir the material thoroughly.
- ◆ Dip the viscosity cup (13) into the material being sprayed and fill the viscosity cup (13) completely.
- ◆ With the viscosity cup (13) held over the material container, measure the amount of time it takes for the stream of material flowing out to "break" or stop being a constant stream out of the bottom of the viscosity cup (13) (2 minutes or less) (fig. M). This is the "runout time" Refer to the thinning table for information on the thinning required for different materials.
- ◆ If material needs thinning, add the appropriate liquid thinning material recommended by the manufacturer.
- ◆ It is possible to spray latex paint with this unit, however the paint may require thinning. In some cases the paint may require thinning beyond the paint manufacturers recommendations, please consult the paint manufacturers instructions. If a paint is found to be too thick and will not spray, thin the paint using the appropriate thinning material. Thinning material should be added at a ratio of 5% of the volume of paint until the paint flows through the paint gun providing an even and satisfactory finish.

Thinning table

Spray material	Runout time
Clear and semi-transparent stains and sealers	No thinning required
Oil based primers, varnishes and polyurethane	(Less than 2 minute runout)
Solid colour water based stains	May require thinning
Water based or latex paints	(More than 2 minute runout)

Note : Not recommended for textured paint

Hints for optimum use

Preparation tips

- ◆ Always stir and strain the material thoroughly before use.
- ◆ With any spraying job you should always ensure that you have properly prepared the surface to get the best finish. That is, all surfaces are free from dust, dirt, rust and grease. Lightly pressure wash decks or exterior surfaces and ensure that they are dry before spraying.
- ◆ It is recommended that you mask all edges and other areas and use drop cloths to protect your floors and anything else in the spraying area that you wish to remain untouched.
- ◆ Skin that forms on the top of paint can clog the sprayer. Remove skin before mixing. Strain with a funnel with a filter attached or through hosiery to remove any impurities that could clog system.
- ◆ Before starting have gloves, paper towels, rags etc. available for unexpected spills.

Developing the proper spraying technique (fig. N & O)

- ◆ Practice spraying on a piece of scrap material such as cardboard to test your spray pattern and become familiar with the flow control feature of the sprayer.
- ◆ Ensure surface to be sprayed is free of dust, dirt, and grease.
- ◆ Ensure spray area is clean and free of dust that could be blown onto newly sprayed surfaces.
- ◆ Cover any areas not intended to be sprayed.
- ◆ Always spray from a minimum of 25mm to a maximum of 355mm (fig. N).
- ◆ A commonly used method for spraying a large surface is the "crisscross" pattern. This is done by spraying in horizontal strips and then crossing over these strips with vertical strips.
- ◆ To get an even spray distribution, always keep your arm at the same distance (fig. N) from the surface you are spraying and avoid moving your wrist (fig. O).
- ◆ Maintain smooth and consistent speed which will help avoid inconsistencies. Begin spraying after the pass has begun and release trigger before stopping the pass.
- ◆ Avoid spraying too heavily in any one area. Several lighter coats are better than one heavy coat which can lead to running and dripping. Remember that the flow control knob regulates the amount of liquid that can be sprayed. Turning the flow knob clockwise increases the flow of liquid. Turning the knob counterclockwise decreases the flow of liquid. If runs or drips do occur, have a dry paint brush on hand to smooth them out.
- ◆ Turn the power unit off and place the sprayer in the built-in dock of the power unit when not spraying for any length of time.

Maintenance and cleaning

Your Black & Decker corded appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper appliance care and regular cleaning.

Warning! Be sure to use appropriate personal protective equipment.

Warning! Before performing any maintenance or cleaning on corded appliances switch off and unplug the appliance.

Warning! Do not use materials with a flashpoint lower than 55°C. Flashpoint is the temperature that a fluid can produce enough vapours to ignite (see paint supplier instructions).

Warning! Make sure clean up area is well ventilated and free of flammable vapours.

Warning! Always spray outdoors when spraying cleaning solution through sprayer.

Warning! Do not submerge power unit.

Using the quick clean system (fig. P & Q) (BDPS400 & BDPS600 only)

The quick clean system allows for a variety of useful functions. First, the system can allow you to spray water or a suitable cleaning liquid while there is still spray material in the main canister. This is useful when setting up your spray pattern with the fan nozzle. You can spray water instead of wasting spray material to view the spray pattern.

Second, the quick clean system allows you to flush the pump assembly, the piston, the nozzle and the atomizer valve. When spraying for long periods of time, spray material may build up causing a deterioration of the spray quality. It is good to flush this system with water or cleaning liquid after every other spray material refill. It is also important to flush the system when the sprayer will sit for more than 15 minutes without use. Spray material can dry on the nozzle and pump assembly and would require a thorough cleaning. Always oil piston if sitting idle for a long period of time. See "Reassembly Section".

Third, the quick clean system allows for a faster clean-up when your project is complete. One or two flushes through the quick clean system gives you a head start on cleaning the nozzle, the atomizer, the pump and piston. Please follow recommended cleaning steps in this manual when performing a final clean of the system.

- ◆ Disconnect the sprayer from the power supply.
- ◆ Open the quick clean door (5), and pour in the cleaning solution using the quick clean fill cup (16).

Warning! Do not overfill the reservoir.

- ◆ Switch the quick clean lever (1) from paint to clean.
- ◆ Spray into a waste container, cardboard box or test surface to completely flush the sprayer system.
- ◆ Repeat until the cleaning solution has returned to its natural colour.

Flushing the sprayer (fig. Q & R)

- ◆ Disconnect the sprayer from the power supply.
- ◆ Unscrew the lid from the side of the canister and pour any remaining liquid back into the original container (fig. R).
- ◆ Pour a small amount of the appropriate cleaning solution into the canister.
 - ◆ Warm soapy water for water based materials.
 - ◆ Manufacturers recommended cleaning solution for oil based materials.
- ◆ Replace the lid (7) on the canister (6) securely and vigorously shake the sprayer.
- ◆ Unscrew the lid (7) from the side of the canister and properly dispose of cleaning solution.
- ◆ Refill the canister with a small amount of new cleaning solution. Screw lid securely on canister.
- ◆ Reattach the sprayer to the motor unit, plug in the cord and turn on the power unit.
- ◆ Switch the quick clean lever (1) from clean to paint. (fig.Q)
- ◆ Spray the cleaning solution through the sprayer onto scrap material for 5 seconds.

Cleaning the sprayer (fig. S - X)

- ◆ Disconnect the sprayer from the power supply.
- ◆ Remove the side fill canister (6) and unscrew the side lid (7). Remove the pickup tube (19) and o-ring (23) from the sprayer. Clean the parts with the cleaning brush (14) in the appropriate cleaning solution (fig. S).
- ◆ Remove the front housing of the sprayer, by pressing down on the release button (15) and pulling the front housing off of the sprayer (fig. T).
- ◆ Remove the piston (27) and spring (26) (fig. U).
- ◆ Remove the spray nozzle (10 / 11), by turning counter-clockwise, then remove the atomizer (24) (fig. U).
- ◆ Clean the spray nozzle (10 / 11), pickup tube (19) and filter (25), atomizer (24), piston (27) and spring (26) with the cleaning brush (14) in the appropriate cleaning solution (fig. T).
- ◆ Thoroughly clean the inside of the piston chamber (28) with the cleaning brush (14) (fig. V)

Important : Be sure to remove all material from inside of piston chamber. A small amount of material that is not removed with the cleaning brush can harden over time and interfere with the movement of the piston causing damage to the sprayer.

- ◆ Switch the quick clean lever (1) from clean to paint.
- ◆ Thoroughly clean the inside of the intake (30) and return (29) openings with the cleaning brush (fig. W).

Important : Thoroughly clean the smaller vent hole (31), with a pin or paper clip (fig. X).

- ◆ Dry all parts thoroughly.
- ◆ Properly dispose of cleaning solution.
- ◆ Reassemble sprayer.

Reassembling the sprayer (fig. Y & Z)

- ◆ Slide the spring (26) onto the front of the piston (27).
- ◆ Insert the piston and spring into the front housing.
- ◆ Pressing down on the release button (15), insert the front housing with piston, into the sprayer until the release button pops into place.
- ◆ Place a few drops of oil through the cylinder opening. Insert the atomizer valve (24) into the front housing. Thread the spray nozzle (10 / 11) onto the front housing and hand tighten.
- ◆ Using the oil lubricant provided, place a few drops of oil down the intake (30) and return (29) openings of the sprayer.
- ◆ Rotate the quick clean lever (1) from paint to clean and back 3 times after oiling.
- ◆ Insert the pickup tube (19) into the intake opening (30) on the sprayer.
- ◆ Re-fit the side fill canister.

Cleaning the power unit

- ◆ Turn the power unit off, unplug the cord and disconnect the sprayer from the motor unit.
- ◆ Use only mild soap and damp cloth to clean the power unit.

Warning! Never let any liquid get inside the power unit.

Warning! Never immerse any part of the power unit into a liquid.

Mains plug replacement (U.K. & Ireland only)

If a new mains plug needs to be fitted:

- ◆ Safely dispose of the old plug.
- ◆ Connect the brown lead to the live terminal in the new plug.
- ◆ Connect the blue lead to the neutral terminal.
- ◆ Connect the green/yellow lead to the earth terminal.

Warning! Follow the fitting instructions supplied with good quality plugs. Recommended fuse: 13A.

Protecting the environment

Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com

Technical data

		BDPS200 (Type 1)	BDPS400 (Type 1)	BDPS600 (Type 1)
Voltage	V _{ac}	230	230	230
Power	W	120	150	150
Tank capacity	l	1.2	1.2	1.2
Weight	kg	2.1	2.2	2.2

Level of sound pressure according to EN 60745:	
Sound pressure (L _{pA})	90 dB(A), uncertainty (K) 3 dB(A)
Sound power (L _{WA})	103 dB(A), uncertainty (K) 3 dB(A)
Vibration total values (triax vector sum) according to EN 60745:	
Vibration emission value (a _{h,D})	11 m/s ² , uncertainty (K) 1.5 m/s ²

EC declaration of conformity
MACHINERY DIRECTIVE



BDPS200, BDPS400, BDPS600

Black & Decker declares that these products described under "technical data" are in compliance with:
2006/42/EC, EN60745

For more information, please contact Black & Decker at the following address or refer to the back of the manual.

The undersigned is responsible for compilation of the technical file and makes this declaration on behalf of Black & Decker.

Kevin Hewitt
Vice-President Global Engineering
Black & Decker Europe, 210 Bath Road, Slough,
Berkshire, SL1 3YD
United Kingdom
28/09/2011

Guarantee


Black & Decker is confident of the quality of its products and offers an outstanding guarantee. This guarantee statement is in addition to and in no way prejudices your statutory rights. The guarantee is valid within the territories of the Member States of the European Union and the European Free Trade Area.


If a Black & Decker product becomes defective due to faulty materials, workmanship or lack of conformity, within 24 months from the date of purchase, Black & Decker guarantees to replace defective parts, repair products subjected to fair wear and tear or replace such products to ensure minimum inconvenience to the customer unless:


- ◆ The product has been used for trade, professional or hire purposes;
- ◆ The product has been subjected to misuse or neglect;
- ◆ The product has sustained damage through foreign objects, substances or accidents;
- ◆ Repairs have been attempted by persons other than authorised repair agents or Black & Decker service staff.

To claim on the guarantee, you will need to submit proof of purchase to the seller or an authorised repair agent. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com

Please visit our website www.blackanddecker.co.uk to register your new Black & Decker product and to be kept up to date on new products and special offers. Further information on the Black & Decker brand and our range of products is available at www.blackanddecker.co.uk

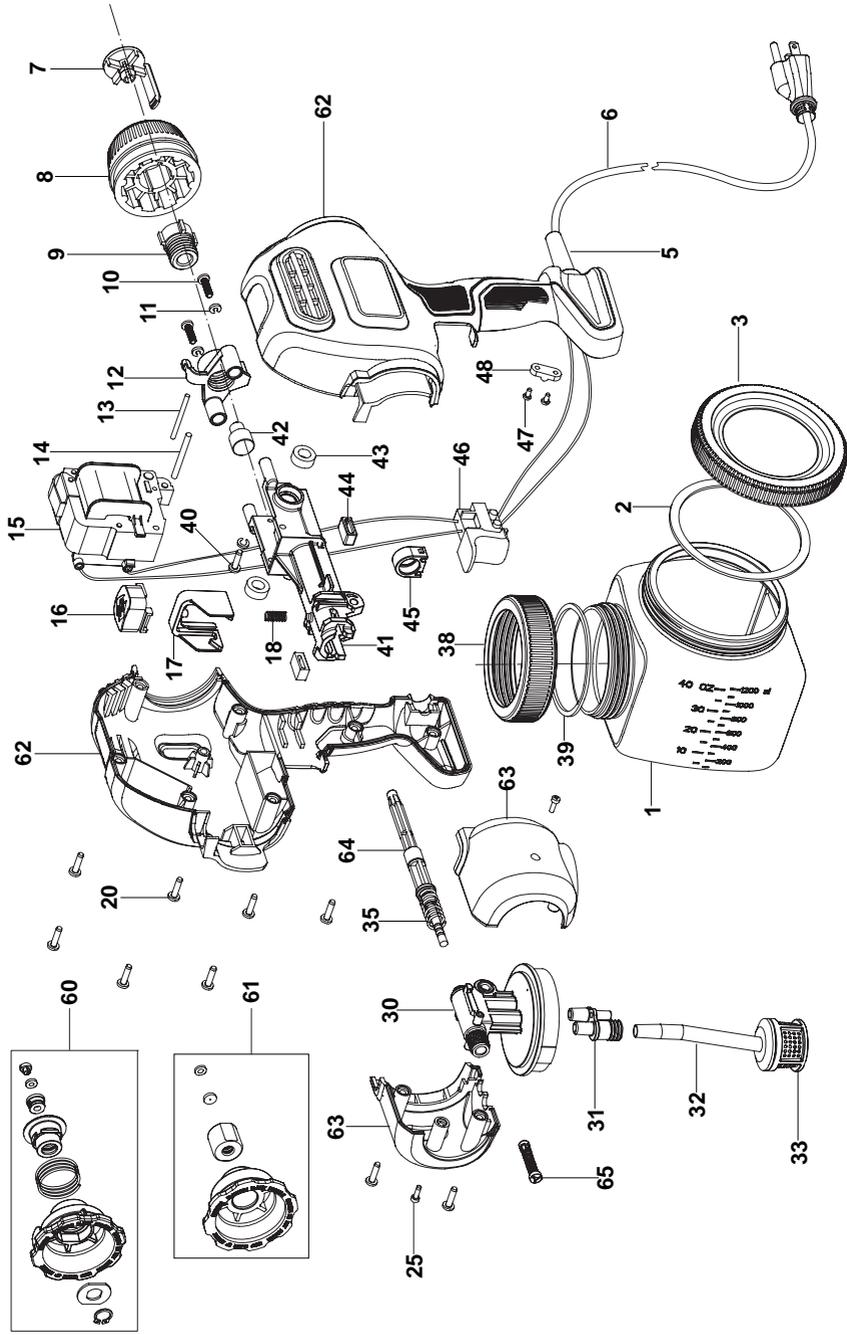

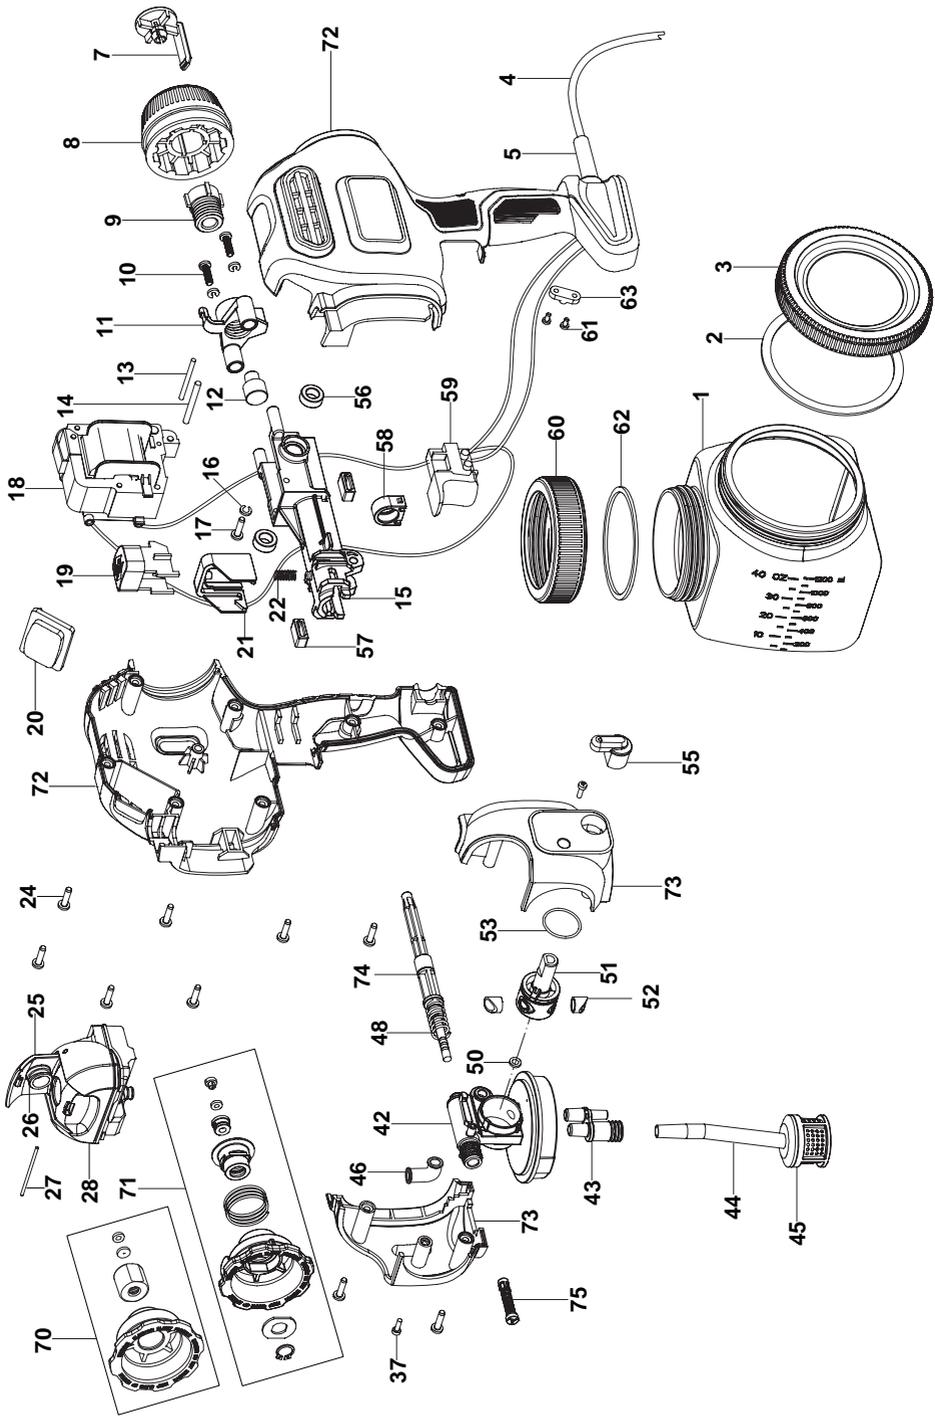

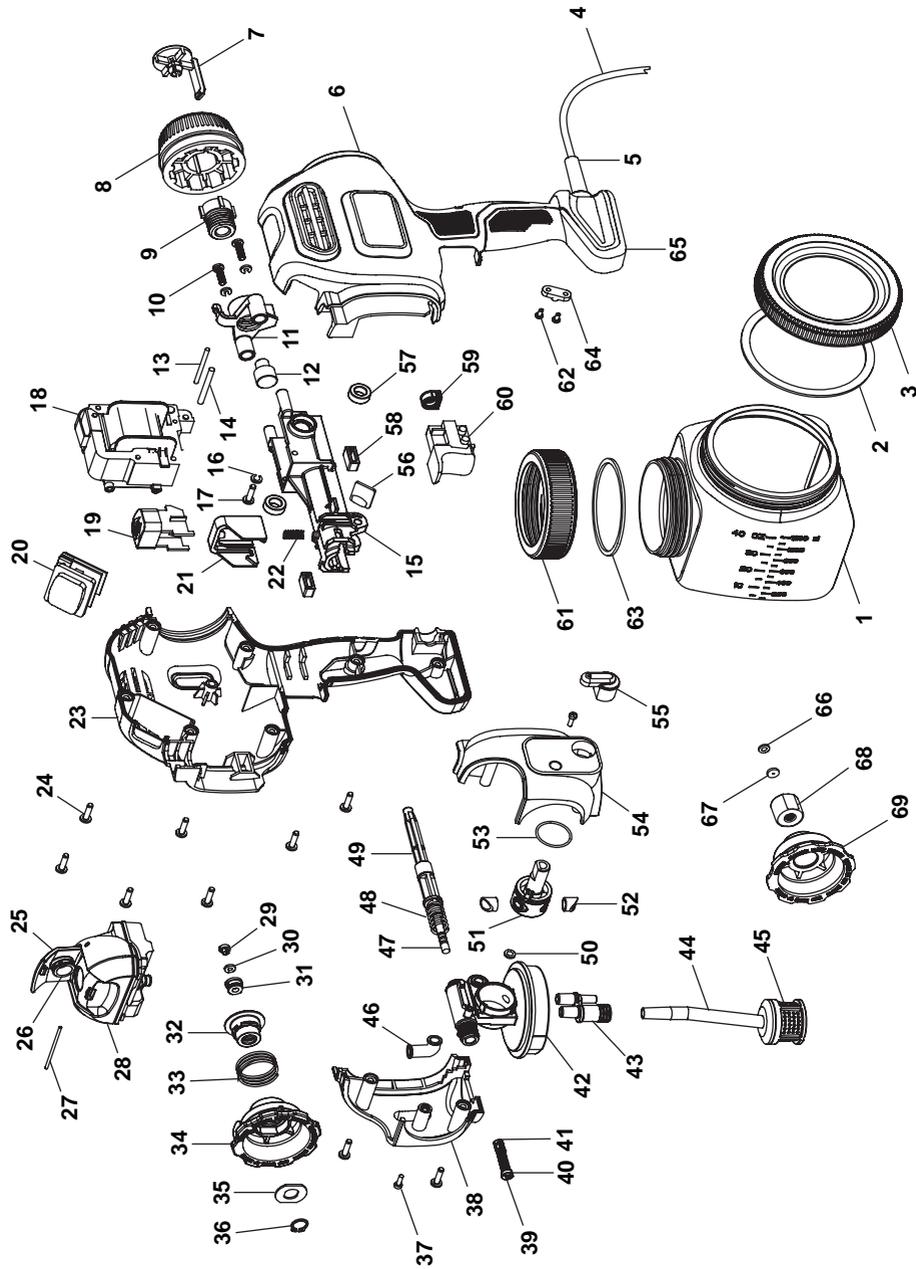

ENGLISH

Do not forget to register your product!

www.blackanddecker.co.uk/productregistration

Register your product online at **www.blackanddecker.co.uk/productregistration** or send your name, surname and product code to Black & Decker in your country.

Australia

Black & Decker (Australia) Pty. Ltd.
20 Fletcher Road, Mooroolbark,
Victoria, 3138

Tel. 03-8720 5100
Fax 03-9727 5940

New Zealand

Black & Decker
5 Te Apunga Place
Mt Wellington
Auckland 1060

Tel. +64 9 259 1133
Fax +64 9 259 1122

United Kingdom

Black & Decker
210 Bath Road
Slough, Berkshire SL1 3YD

Tel. 01753 511234
Fax 01753 551155